



INSTALLATION GUIDE

SPRINTER REAR DOOR GRAB HANDLE

SP0152B



TOOLS REQUIRED (NOT INCLUDED)

- + 6MM ALLEN WRENCH

INSTALL INFO

TIME TO INSTALL THIS PRODUCT: 10 MINUTES

Additional help is suggested for a few of the install steps.

BEFORE YOU START

Please inspect the product and packaging upon delivery to ensure there are no issues and that all parts and hardware are accounted for.


Contact us ASAP if anything is missing at:
support@flatlinevanco.com

BEFORE YOU START

All Flatline Van Co products must be properly assembled and secured before attaching to your vehicle. Improper attachment could result in an automobile accident, and could cause serious bodily injury or death to you or to others involved. You are responsible for assembling and securing Flatline Van Co products to your vehicle, checking the mounting points and attachments prior to use, and regularly inspecting the products for wear and or damage. We always recommend you use a professional to install any aftermarket accessories to your vehicle. If you have no mechanical experience and are not thoroughly familiar with the installation procedures, you must have the product installed by a professional installer or other qualified persons. The responsibility is yours and must be taken seriously for everyone's safety.




PACKAGE CONTENTS

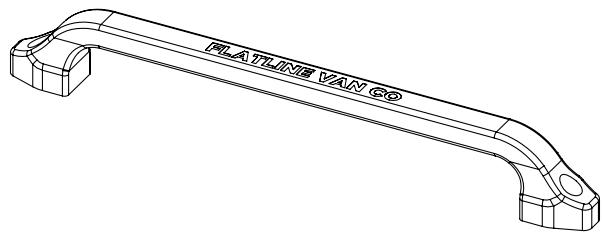

GRAB HANDLE

QTY: 1

HARDWARE

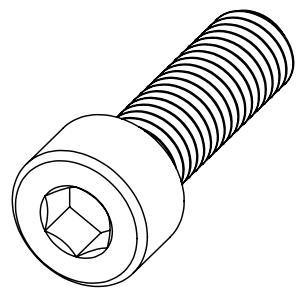

M8-1.25 X 25MM SOCKET HEAD HEX
DRIVE SCREW

QTY: 2

STEP | 01 LAYOUT AND INSTALL PREP

1.1 Locate D-Pillar: Identify the **D-Pillar** (FIG 1) along the inside of the **Rear Doors** of your van. Remove any **Factory or Aftermarket Trim** obstructing access to the **Pre-Threaded Holes** (FIG 2) that will be used to mount your **FVC Rear Door Grab Handle** (FIG 3).

NOTE - You can install the **FVC Grab Handle** on either the **Driver or Passenger Side** (FIG 3) of your van.

TOOLS REQUIRED FOR THIS STEP:



FIG 1



FIG 2



FIG 3

STEP | 02 INSTALL GRAB HANDLE

2.1 Install Grab Handle Use the supplied M8 Socket Head Hex Drive Screws to attach the FVC Rear Door Grab Handle to the Pre-Threaded Holes of your van's D-Pillar (FIG 4-6).

NOTE - You can install the **FVC Grab Handle** on either the **Driver (FIG 6)** or **Passenger Side** of your van.

TOOLS REQUIRED FOR THIS STEP: + 6MM ALLEN WRENCH



FIG 4



FIG 5

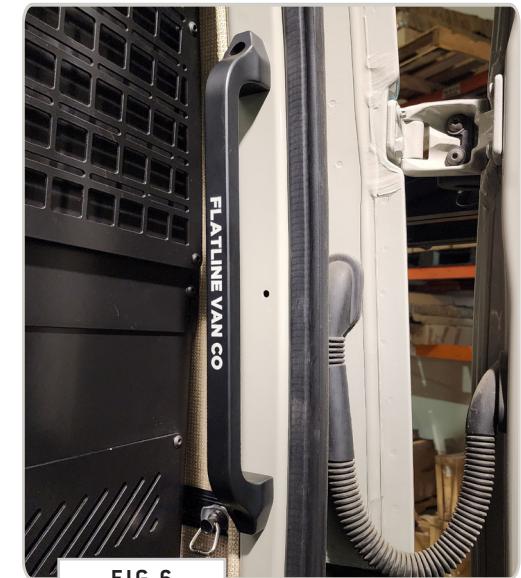


FIG 6

GET OUT AND EXPLORE!

+ LEAVE US A REVIEW

Happy with your new FVC product? We would love to hear (and see) from you! Head to the product page and click "Leave Review." Add a short review and upload a few photos to be showcased on the product page.

+ SHARE YOUR PICS

We love seeing how our customers use their FVC products and following along with your adventures. Tag us in your photos with: @flatlinevanco or send them to us via email. We love posting customer pictures in our feed!

+ NEED ANY HELP?

If you are having any issues with your product, please reach out, and we will make it right. FVC is a company of van and outdoor enthusiasts that design and use our own products, so we want you to be as stoked on your new parts as we are!



@FLATLINEVANCO