



INSTALLATION GUIDE

SPRINTER VAN BED SYSTEM FLARE FRY BRACKETS - 170"

SP0319B



TOOLS REQUIRED (NOT INCLUDED)

- + 7/16" WRENCH OR SOCKET
- + 5/32" ALLEN WRENCH

INSTALL INFO

TIME TO INSTALL THIS PRODUCT: 30 MINUTES

BEFORE YOU START

Please inspect the product and packaging upon delivery to ensure there are no issues and that all parts and hardware are accounted for.


Contact us ASAP if anything is missing at:
support@flatlinevanco.com

BEFORE YOU START

All Flatline Van Co products must be properly assembled and secured before attaching to your vehicle. Improper attachment could result in an automobile accident, and could cause serious bodily injury or death to you or to others involved. You are responsible for assembling and securing Flatline Van Co products to your vehicle, checking the mounting points and attachments prior to use, and regularly inspecting the products for wear and or damage. We always recommend you use a professional to install any aftermarket accessories to your vehicle. If you have no mechanical experience and are not thoroughly familiar with the installation procedures, you must have the product installed by a professional installer or other qualified persons. The responsibility is yours and must be taken seriously for everyone's safety.




PACKAGE CONTENTS

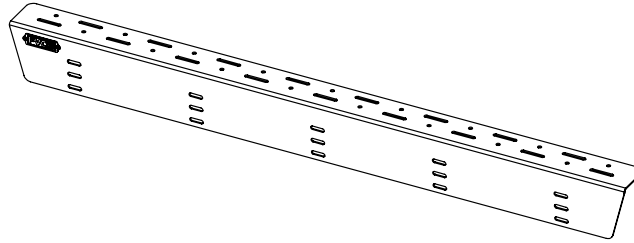

BED FRY BRACKETS


QTY: 2

HARDWARE

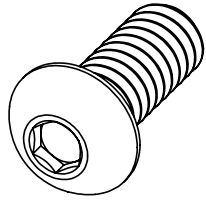


1/4-20 X 0.625 BUTTON
HEAD HEX DRIVE SCREW

QTY: 16

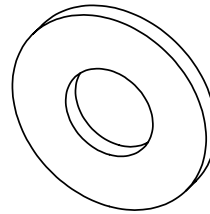

1/4 SCREW FLAT WASHER

QTY: 16

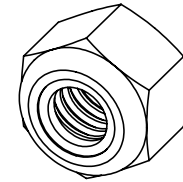

1/4-20 NYLON INSERT
LOCKNUT

QTY: 16

STEP | 01 LAYOUT AND INSTALL PREP

1.1 Verify Fitment and Layout: Reference the listed dimensions of the bracket against the available cavity within your flare trim ring to layout and confirm where the bracket will be positioned.

This step is critical because of the high variability of flare designs available on the market.

While these brackets are optimized for **Flarespace Full Flare Trim Rings**, they may fit others. You must verify fitment based on the specific available space inside your particular trim ring by either measuring the trim ring you have or contacting the manufacturer for these dimensions.

TOOLS REQUIRED FOR THIS STEP:

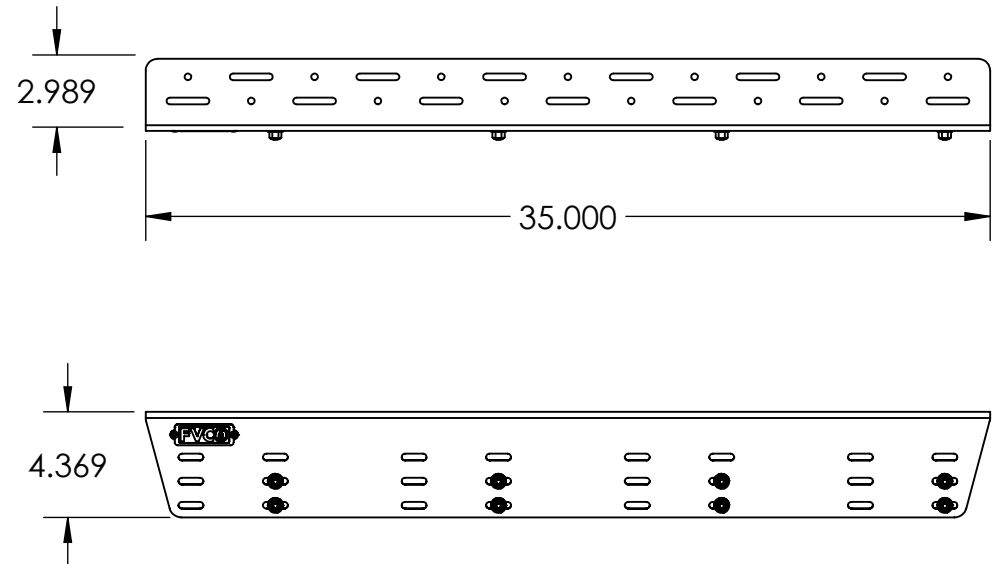


FIG 1

STEP | 01 LAYOUT AND INSTALL PREP

1.2 Align Flare Bed Fry Bracket to Bed Rail: Align the extension bracket against the bed rail weldment in the orientation shown and note the available mounting holes (FIG 2+3).

TOOLS REQUIRED FOR THIS STEP:

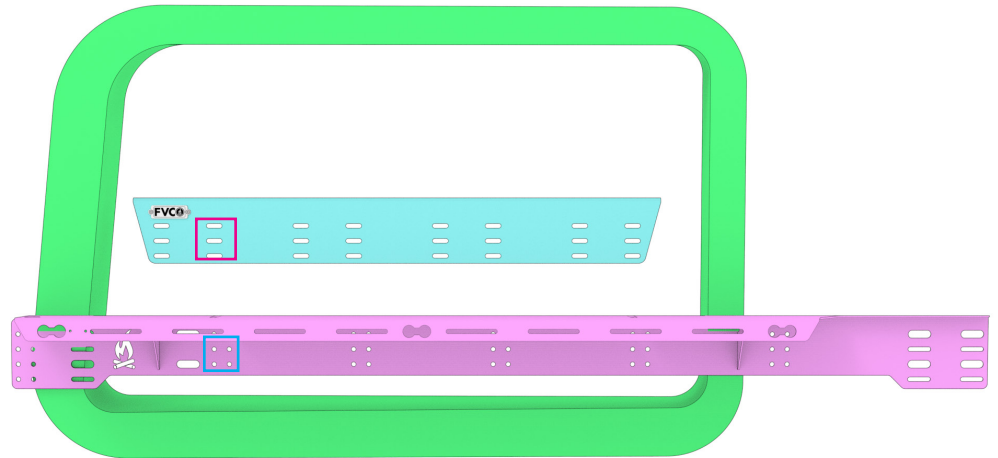


FIG 2

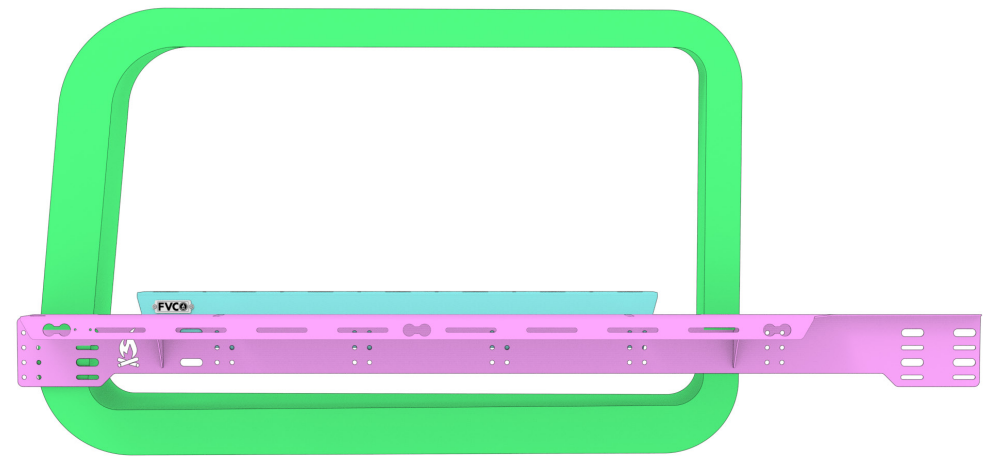


FIG 3

STEP | 02 INSTALL FRY BRACKETS

2.1 Select Height: Choose one of the three mounting positions on the bracket based on your desired mattress insert height (flush, slightly higher, or slightly lower than the rest of the mattress).

TOOLS REQUIRED FOR THIS STEP:

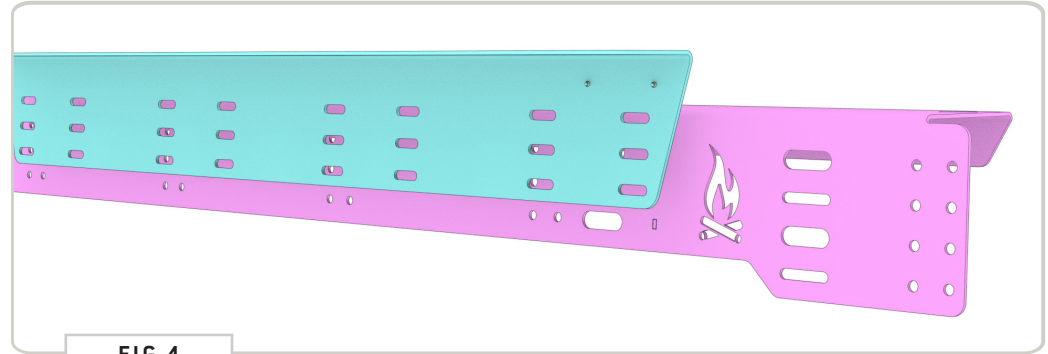


FIG 4

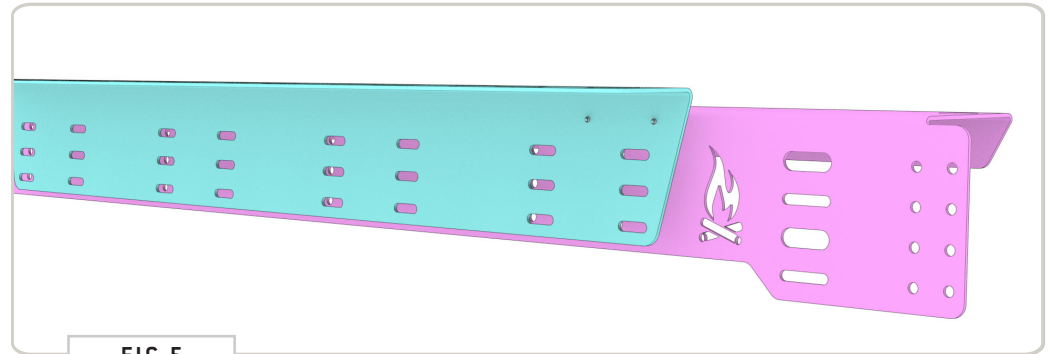


FIG 5



FIG 6

STEP | 02 INSTALL FRY BRACKETS

2.2 Fasten Fry Bracket to Bed Rail: Secure the bracket to the bed rail using the supplied 1/4-20 button head screws, washers, and locknuts.

TOOLS REQUIRED FOR THIS STEP:

- + 7/16" WRENCH OR SOCKET
- + 5/32" ALLEN WRENCH

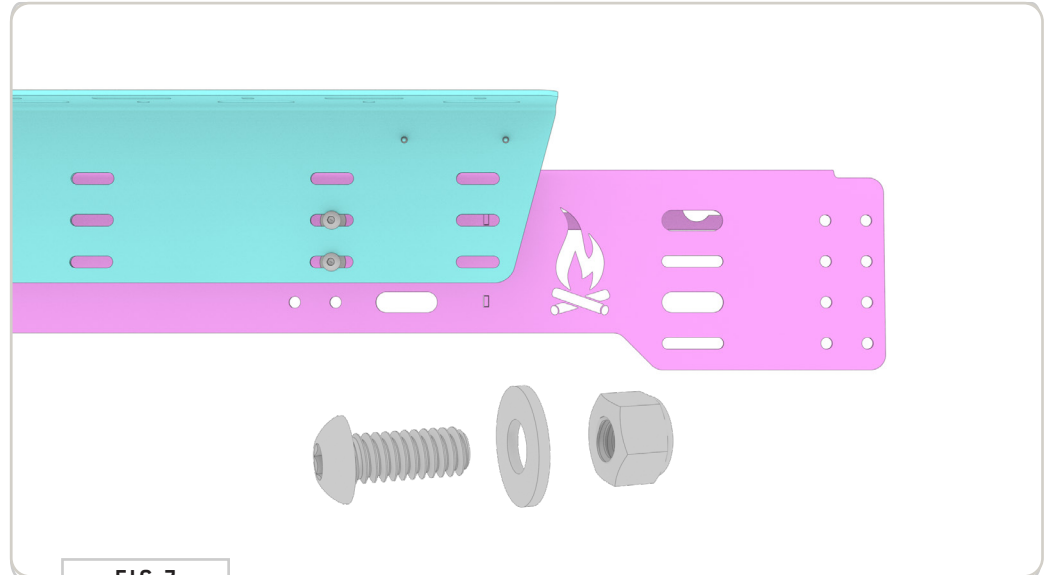


FIG 7

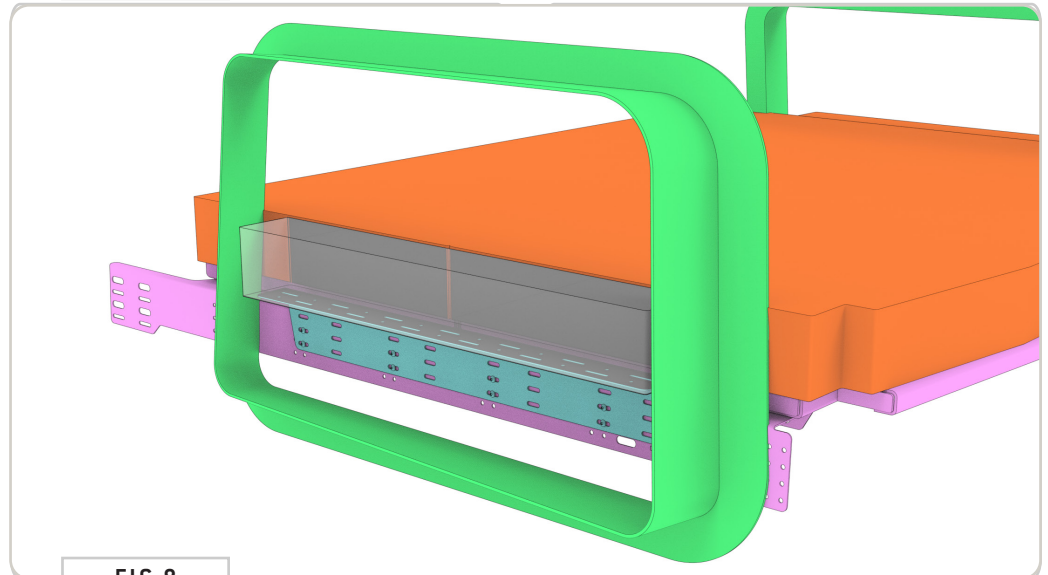


FIG 8

GET OUT AND EXPLORE!

+ LEAVE US A REVIEW

Happy with your new FVC product? We would love to hear (and see) from you! Head to the product page and click "Leave Review." Add a short review and upload a few photos to be showcased on the product page.

+ SHARE YOUR PICS

We love seeing how our customers use their FVC products and following along with your adventures. Tag us in your photos with: @flatlinevanco or send them to us via email. We love posting customer pictures in our feed!

+ NEED ANY HELP?

If you are having any issues with your product, please reach out, and we will make it right. FVC is a company of van and outdoor enthusiasts that design and use our own products, so we want you to be as stoked on your new parts as we are!



@FLATLINEVANCO