



INSTALLATION GUIDE

SPRINTER VAN L-TRACK KIT - 170"

SP0321B



TOOLS REQUIRED (NOT INCLUDED)

- + 5/32" ALLEN WRENCH
- + IMPACT DRIVER

INSTALL INFO

TIME TO INSTALL THIS PRODUCT: 1-2 HOURS

Additional help is suggested for a few of the install steps.

BEFORE YOU START

Please inspect the product and packaging upon delivery to ensure there are no issues and that all parts and hardware are accounted for.


Contact us ASAP if anything is missing at:
support@flatlinevanco.com

BEFORE YOU START

All Flatline Van Co products must be properly assembled and secured before attaching to your vehicle. Improper attachment could result in an automobile accident, and could cause serious bodily injury or death to you or to others involved. You are responsible for assembling and securing Flatline Van Co products to your vehicle, checking the mounting points and attachments prior to use, and regularly inspecting the products for wear and or damage. We always recommend you use a professional to install any aftermarket accessories to your vehicle. If you have no mechanical experience and are not thoroughly familiar with the installation procedures, you must have the product installed by a professional installer or other qualified persons. The responsibility is yours and must be taken seriously for everyone's safety.




PACKAGE CONTENTS

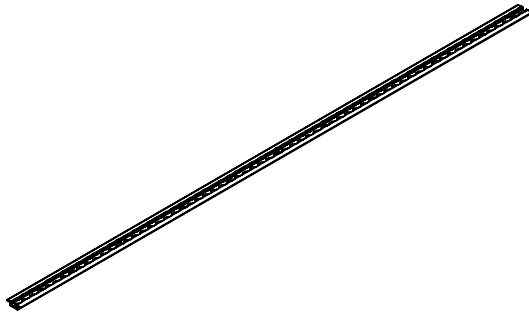

**SPRINTER 170 BED REAR
L-TRACK**


QTY: 2

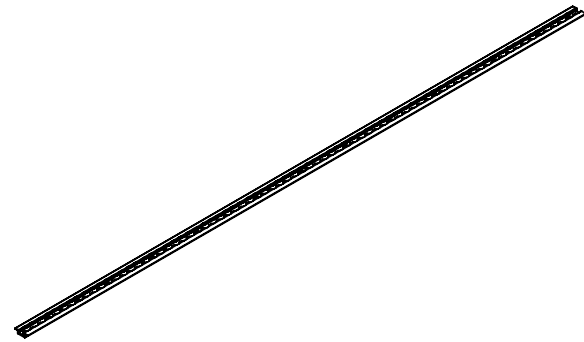

**SPRINTER 170 BED FRONT
L-TRACK**

QTY: 2

HARDWARE

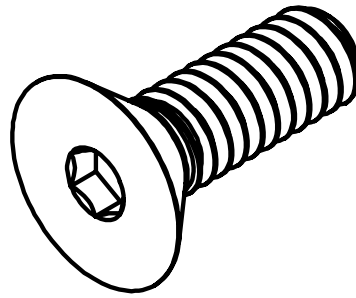

1/4-20 X 0.75 FLAT HEAD HEX DRIVE SCREW

QTY: 48

INSTALL

STEP | 01 LAYOUT AND INSTALL PREP

1.1 Identify Mounting Locations: Find the pre-threaded holes highlighted blue in FIG 1 and 2 that you'll use to install your L-Track Kit to FVC Sprinter Bed Brackets.

NOTE - This product is *exclusively* made for *Flatline Van Company Bed Brackets*.

TOOLS REQUIRED FOR THIS STEP:

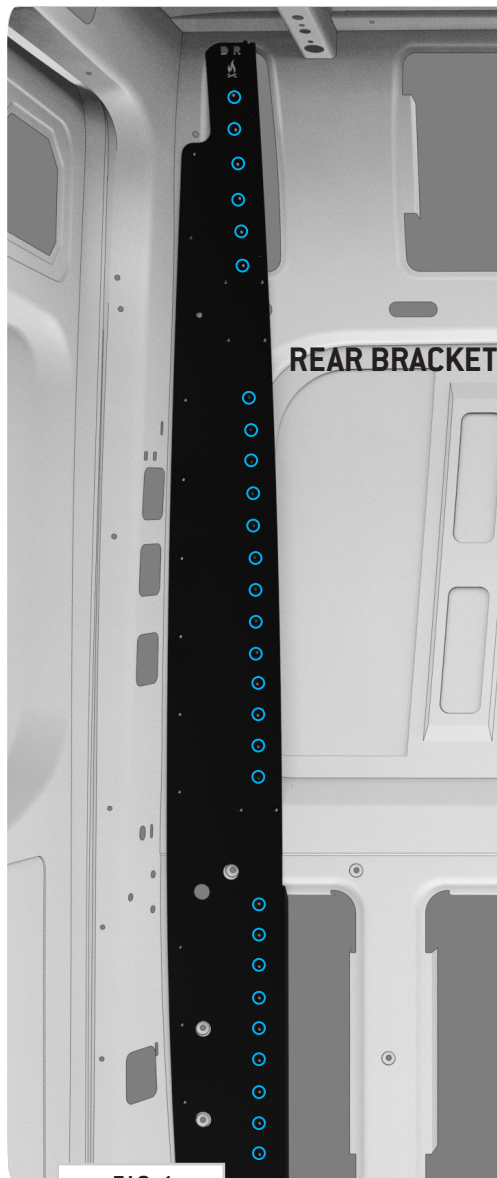


FIG 1

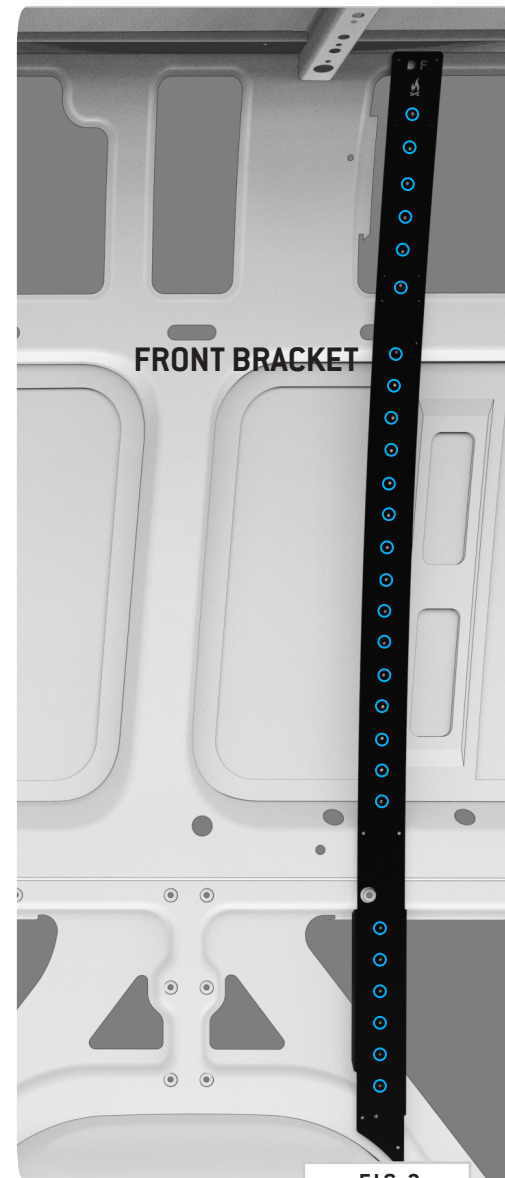


FIG 2

TOOLS REQUIRED FOR THIS STEP:

STEP | 02 L-TRACK INSTALL

2.1 Identify L-Track Extrusions: See FIG 3 and 4 for relevant dimensions for determining which L-Tracks are spaced for the **Front and Rear Bed Brackets**.

NOTE - For installations with **Wall Panels**, drilling alignment holes is not required. In this flush-mount configuration, the wall panels sit captive behind the L-Track. Ensure your wall panels are properly positioned and tucked behind the track flange before securing the L-Track to the vehicle structure.

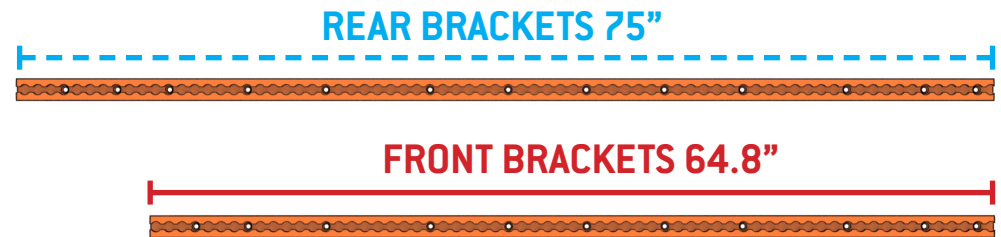


FIG 3

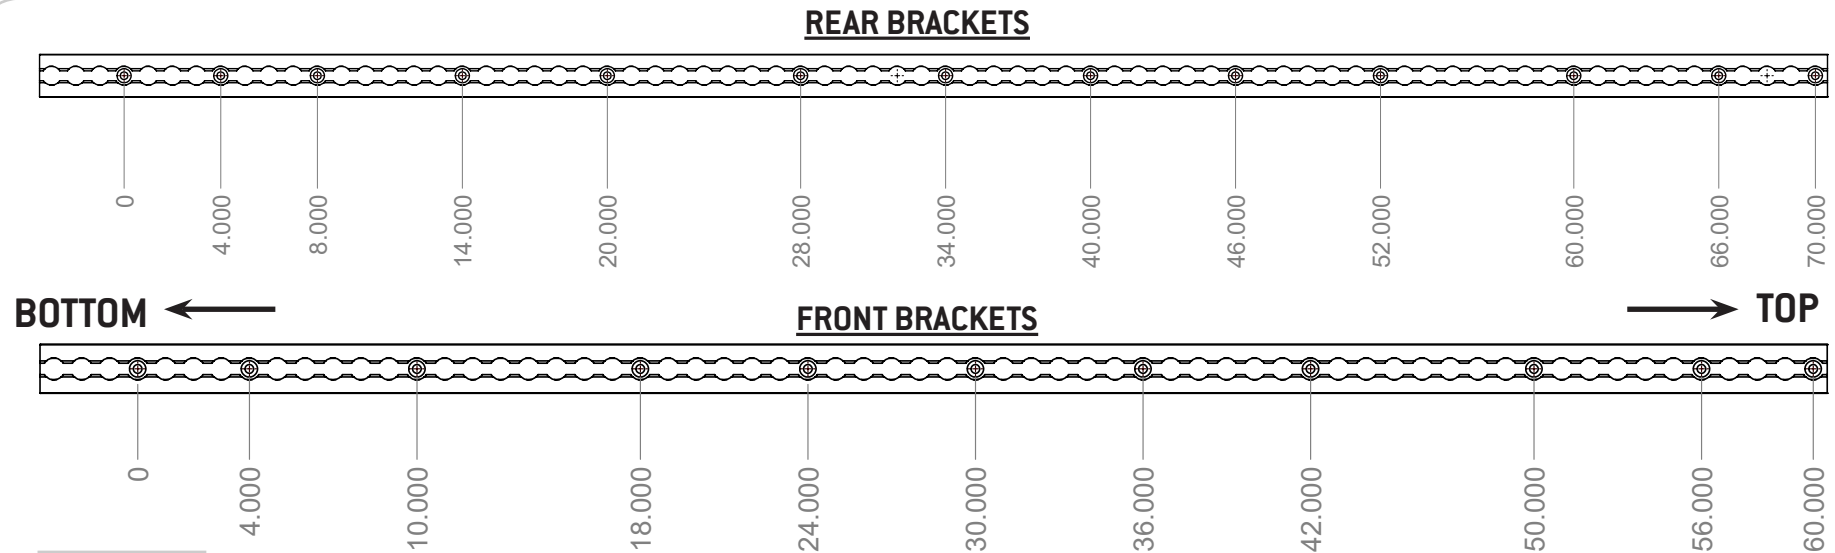


FIG 4

TOOLS REQUIRED FOR THIS STEP:

STEP | 02 L-TRACK INSTALL

2.2 Position L-Track to Bracket: Position the appropriate L-Track to your **Bed Bracket** and flex it to match the contour of the van's wall.



FIG 5



FIG 6

TOOLS REQUIRED FOR THIS STEP: + 5/32" ALLEN WRENCH

STEP | 02 L-TRACK INSTALL

2.3 Secure L-Track to Bracket: Starting with the **Bottom-Most** mounting hole, secure the **L-Track** in place using **1/4-20 X 0.75 Flat Head Hex Drive Screws**.

NOTE - We recommend applying a small amount of anti-seize to the threads of all stainless steel hardware before installation. This helps prevent thread galling during assembly and makes future removal easier. Avoid applying excessive amounts, as only a light coating is needed.



FIG 7



FIG 8

GET OUT AND EXPLORE!

+ LEAVE US A REVIEW

Happy with your new FVC product? We would love to hear (and see) from you! Head to the product page and click "Leave Review." Add a short review and upload a few photos to be showcased on the product page.

+ SHARE YOUR PICS

We love seeing how our customers use their FVC products and following along with your adventures. Tag us in your photos with: @flatlinevanco or send them to us via email. We love posting customer pictures in our feed!

+ NEED ANY HELP?

If you are having any issues with your product, please reach out, and we will make it right. FVC is a company of van and outdoor enthusiasts that design and use our own products, so we want you to be as stoked on your new parts as we are!



@FLATLINEVANCO