




INSTALLATION GUIDE

VS30 SPRINTER VAN REAR DOOR STOPS

SP1162B

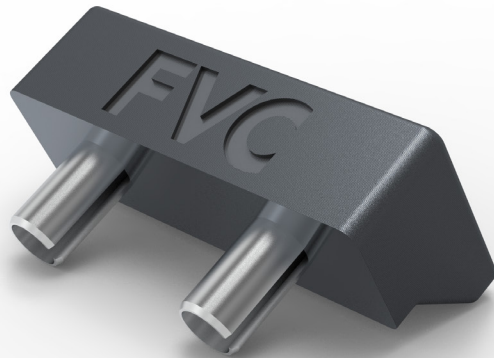

TOOLS REQUIRED (NOT INCLUDED)

- + PICK OR PRY TOOL
- + SOFT MALLET
- + PLIERS

INSTALL INFO

TIME TO INSTALL THIS PRODUCT: 15 MINUTES

BEFORE YOU START

Please inspect the product and packaging upon delivery to ensure there are no issues and that all parts and hardware are accounted for.


Contact us ASAP if anything is missing at:
support@flatlinevanco.com

BEFORE YOU START

All Flatline Van Co products must be properly assembled and secured before attaching to your vehicle. Improper attachment could result in an automobile accident, and could cause serious bodily injury or death to you or to others involved. You are responsible for assembling and securing Flatline Van Co products to your vehicle, checking the mounting points and attachments prior to use, and regularly inspecting the products for wear and or damage. We always recommend you use a professional to install any aftermarket accessories to your vehicle. If you have no mechanical experience and are not thoroughly familiar with the installation procedures, you must have the product installed by a professional installer or other qualified persons. The responsibility is yours and must be taken seriously for everyone's safety.




PACKAGE CONTENTS

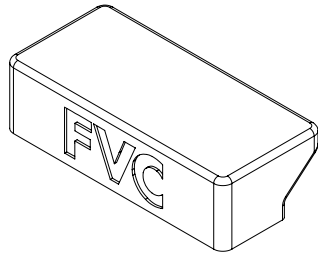

DOOR STOP

QTY: 1

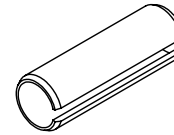

ROLL PINS

QTY: 2

TOOLS REQUIRED FOR THIS STEP: + PLIERS

STEP | 01 ASSEMBLE DOOR STOP

1.1 Crimp Roll Pins: Using pliers, gently crimp each Roll Pin to narrow the diameter for fitment to the FVC Door Stop (FIG 1-2).

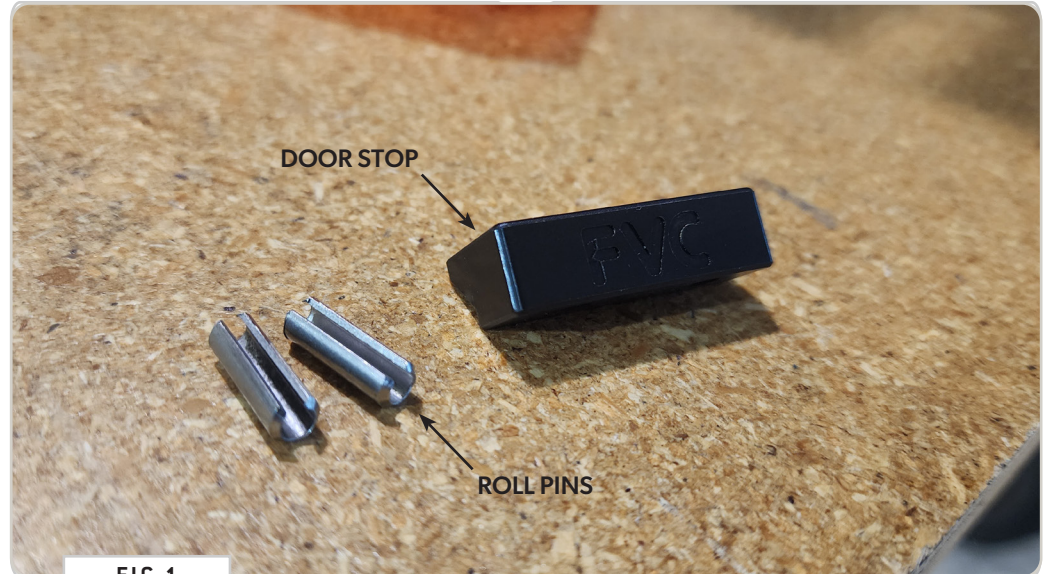


FIG 1



FIG 2

STEP | 01 ASSEMBLE DOOR STOP

1.2 Insert Pins into Door Stop: Press each crimped **Roll Pin** into the receiving holes on the back of the **Door Stop**. Tap them in using a soft mallet or squeeze with pliers until seated (**FIG 3**).

1.3 Verify Assembly: Ensure both pins are firmly anchored and extend straight out from the back of the door stop block. Repeat for the second door stop if applicable (**FIG 4**).

TOOLS REQUIRED FOR THIS STEP: + SOFT Mallet
+ PLIERS



FIG 3



FIG 4

TOOLS REQUIRED FOR THIS STEP: + PICK OR PRY TOOL

STEP | 02 INSTALL DOOR STOPS

2.1 Remove Factory Stops: Locate the OEM rubber stops on your van's rear door hinges. Insert a pick or pry tool behind the rubber stop to pop it out from the hinge body. Clean away any grime inside the hinge holes (**FIG 5-6**).



FIG 5



FIG 6

STEP | 02 INSTALL DOOR STOPS

2.2 Align Door Stop: Line up the pre-assembled door stop so the protruding roll pins align directly with the pin holes on the van's rear door hinge (**FIG 7**).

2.3 Seat Stop Flush: Use a soft mallet to evenly tap the front face of the door stop until it is completely flush against the hinge face. Repeat for the second door stop on the other hinge if applicable (**FIG 8**).



FIG 7



FIG 8

TOOLS REQUIRED FOR THIS STEP:

STEP | 03 CHECK STOP FITMENT

3.1 Test Door Swing: Slowly swing the rear door through its full range of motion to check clearance with any mounted accessories, such as tire carriers or ladder racks (**FIG 9**).

3.2 Verify Hinge Contact: Ensure the new door stop makes full contact against the hinge mount “tang”, preventing the platform or ladder from striking the van body (**FIG 10**).



FIG 9



FIG 10

GET OUT AND EXPLORE!

+ LEAVE US A REVIEW

Happy with your new FVC product? We would love to hear (and see) from you! Head to the product page and click "Leave Review." Add a short review and upload a few photos to be showcased on the product page.

+ SHARE YOUR PICS

We love seeing how our customers use their FVC products and following along with your adventures. Tag us in your photos with: @flatlinevanco or send them to us via email. We love posting customer pictures in our feed!

+ NEED ANY HELP?

If you are having any issues with your product, please reach out, and we will make it right. FVC is a company of van and outdoor enthusiasts that design and use our own products, so we want you to be as stoked on your new parts as we are!



@FLATLINEVANCO