



# INSTALLATION GUIDE

## TRANSIT VAN L-TRACK KIT - HIGH ROOF

TR0311B + TR0311S



### TOOLS REQUIRED (NOT INCLUDED)

- + SCREWDRIVER
- + IMPACT DRIVER
- + 5/32" ALLEN WRENCH

### INSTALL INFO

TIME TO INSTALL THIS PRODUCT: 1-2 HOURS

Additional help is suggested for a few of the install steps.

### BEFORE YOU START

Please inspect the product and packaging upon delivery to ensure there are no issues and that all parts and hardware are accounted for.

Contact us ASAP if anything is missing at:  
[support@flatlinevanco.com](mailto:support@flatlinevanco.com)

# BEFORE YOU START

All Flatline Van Co products must be properly assembled and secured before attaching to your vehicle. Improper attachment could result in an automobile accident, and could cause serious bodily injury or death to you or to others involved. You are responsible for assembling and securing Flatline Van Co products to your vehicle, checking the mounting points and attachments prior to use, and regularly inspecting the products for wear and or damage. We always recommend you use a professional to install any aftermarket accessories to your vehicle. If you have no mechanical experience and are not thoroughly familiar with the installation procedures, you must have the product installed by a professional installer or other qualified persons. The responsibility is yours and must be taken seriously for everyone's safety.




# PACKAGE CONTENTS




LOWER L-TRACK

QTY: 4

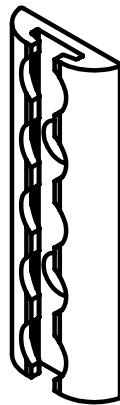

UPPER L-TRACK


QTY: 4

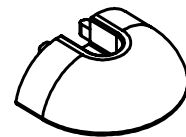

SURFACE MOUNT L  
TRACK END CAP


QTY: 16

# HARDWARE

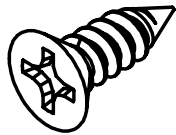


#8 X 0.5 FLAT HEAD PHILLIPS  
DRIVE SCREW

QTY: 16

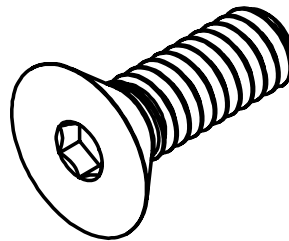

1/4-20 X 0.75 FLAT HEAD HEX  
DRIVE SCREW

QTY: 6

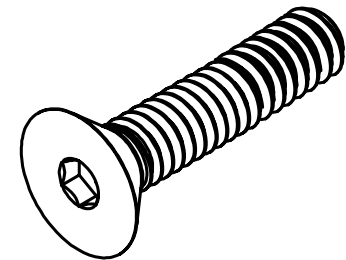

1/4-20 X 1 FLAT HEAD HEX DRIVE  
SCREW

QTY: 54

# INSTALL



## TOOLS REQUIRED FOR THIS STEP:

### STEP | 01 LAYOUT AND INSTALL PREP

**1.1 Identify Mounting Locations:** Find the pre-threaded holes highlighted blue and green in **FIG 1 and 2**. You'll use the threaded holes highlighted **blue** to install the **Lower Tracks** and **green** for the **Upper Tracks**.

**NOTE** - This install will require you to drill clearance holes through your wall panels. Remove them to access your **Bed Brackets**.

**NOTE** - This product is **exclusively** made for **Flatline Van Company Bed Brackets**.

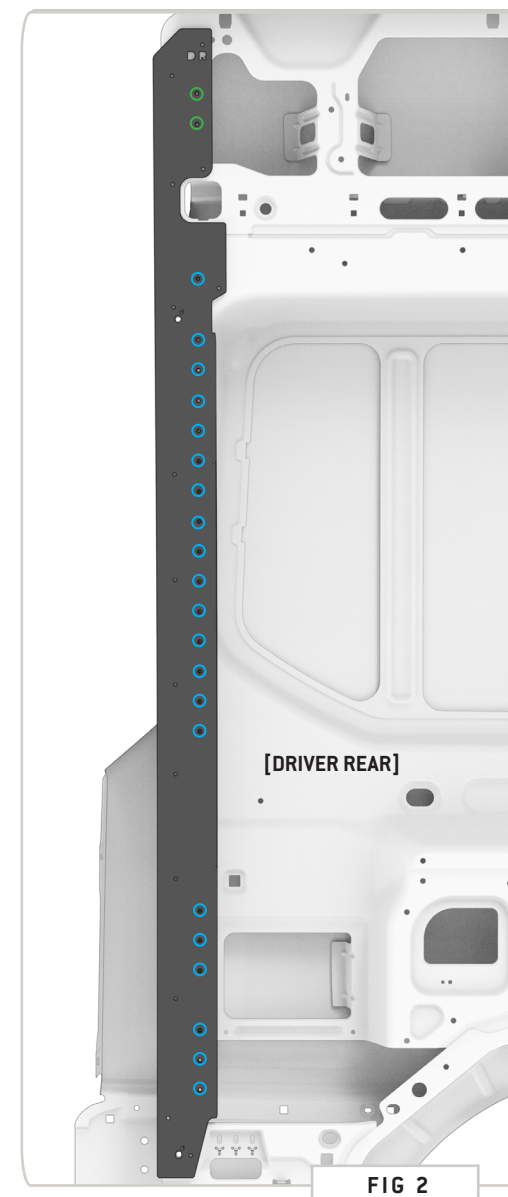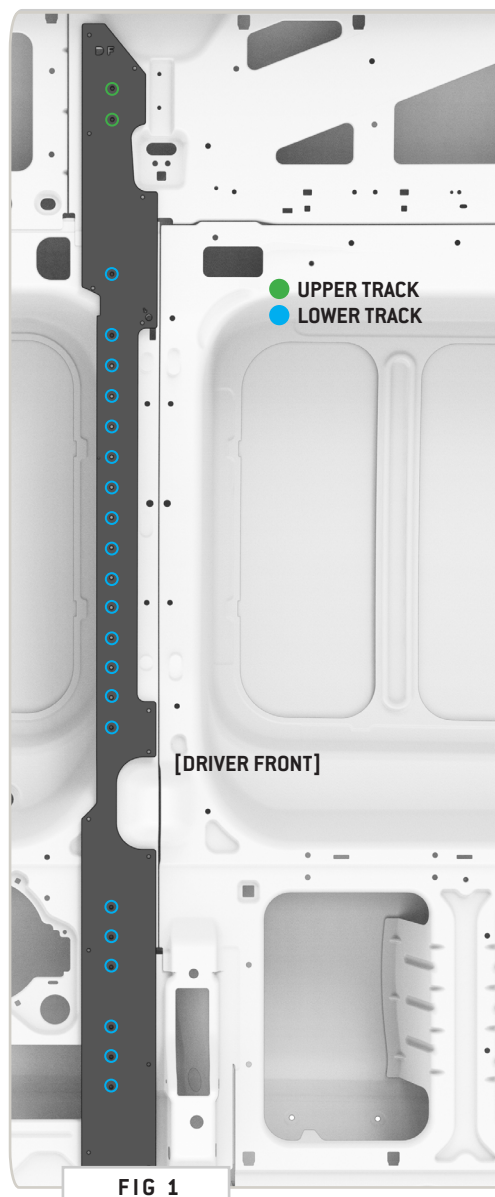

## TOOLS REQUIRED FOR THIS STEP:

### STEP | 02 L-TRACK INSTALL

**2.1 Identify L-Track Extrusions:** See FIG 3 and 4 for relevant dimensions and which L-Tracks are spaced for the **Upper** and **Lower** ends of the **Bed Brackets**.

**NOTE** - For install with **Wall Panels**, measure and determine the location of the bottom hole of the bed bracket and transfer the mark to the corresponding location along your **Wall Panel**. Align the **L-Track** with this mark and use it to mark all other holes. Drill the holes slightly oversized for easier alignment and test fit to ensure they match the **Bed Bracket's** threaded holes. Install the **Wall Panels** back on the van before proceeding to the next step.

#### UPPER TRACKS

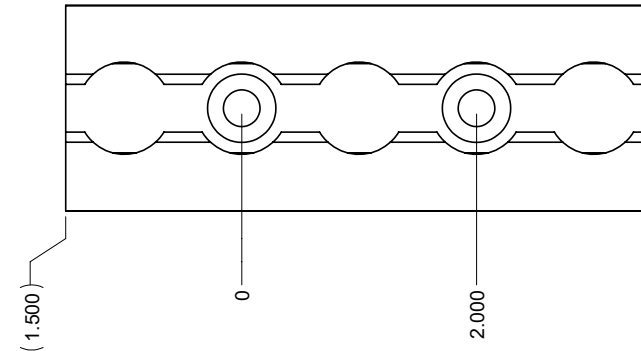


FIG 3

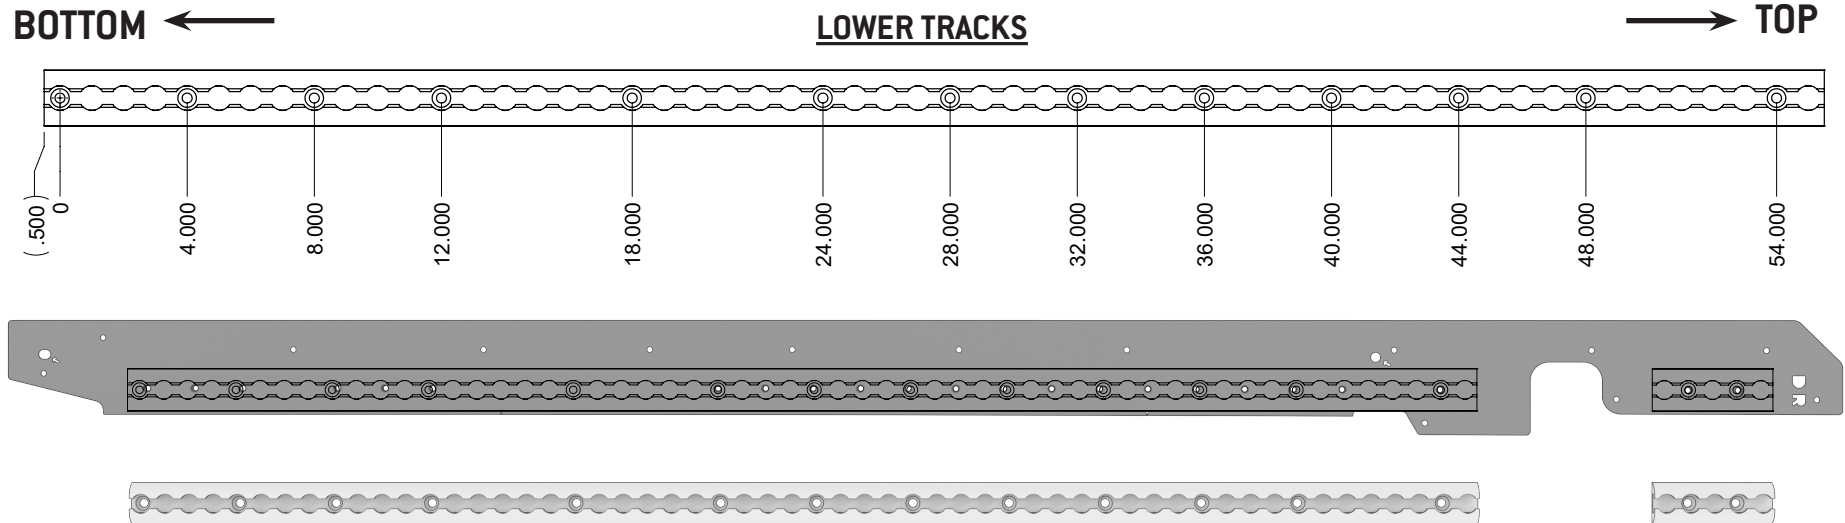


FIG 4

TOOLS REQUIRED FOR THIS STEP:

## STEP | 02 L-TRACK INSTALL

**2.2 Position L-Track to Bracket:** Position the appropriate L-Track to your **Bed Bracket** and flex it to match the contour of the van's wall.



FIG 5



FIG 6





TOOLS REQUIRED FOR THIS STEP: + 5/32" ALLEN WRENCH

## STEP | 02 L-TRACK INSTALL

**2.3a Secure Driver Side L-Track to Bracket:** Starting with the **Bottom-Most** mounting hole, secure the L-Track in place using **1/4-20 X 1 Flat Head Hex Drive Screws**.

**NOTE** - There are additional **1/4-20 X 0.75 Flat Head Hex Drive Screws** to use in the highlighted locations shown in **FIG 7a** and **FIG 8a**.

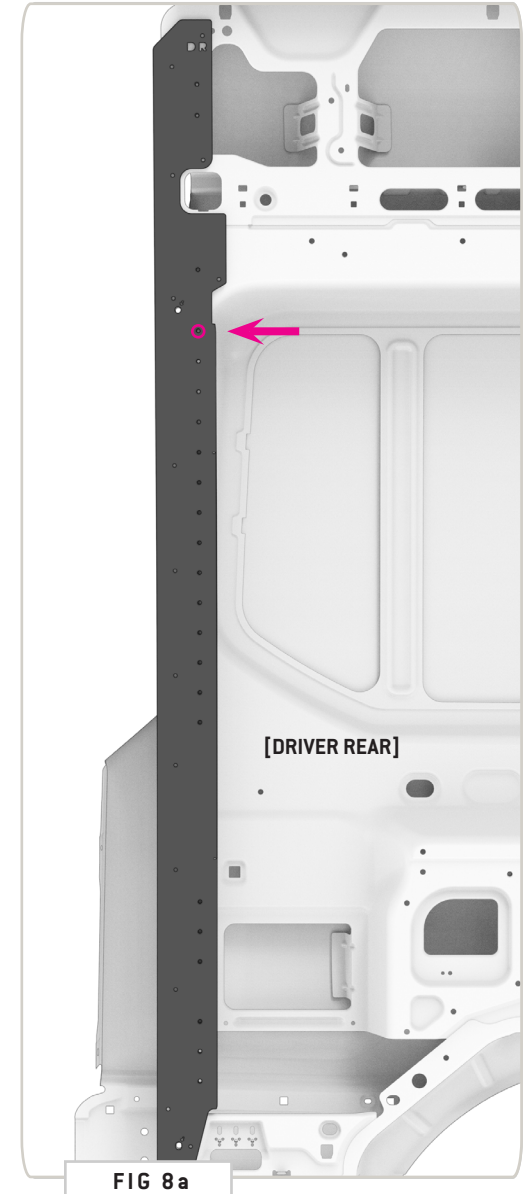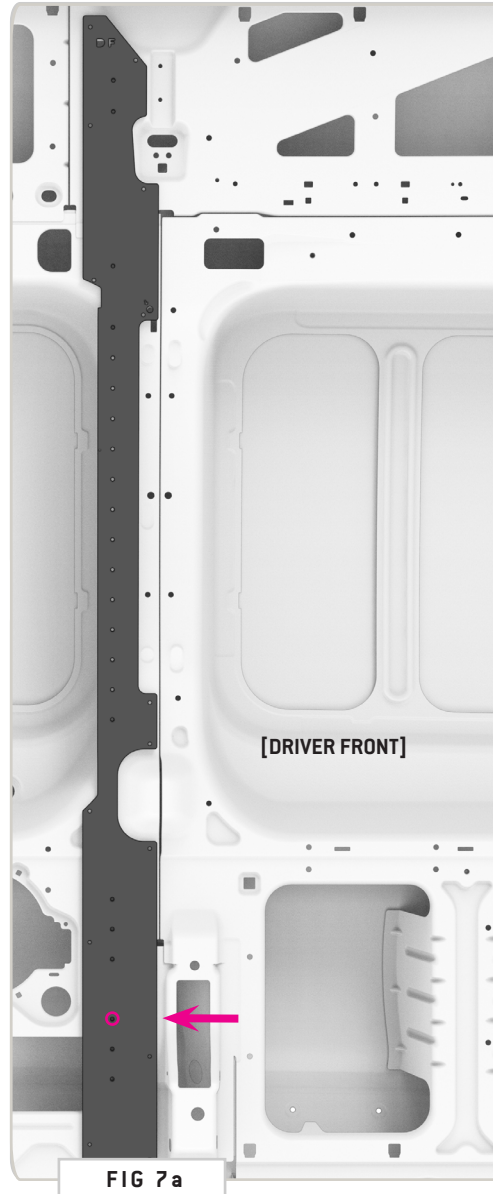



TOOLS REQUIRED FOR THIS STEP: + 5/32" ALLEN WRENCH

## STEP | 02 L-TRACK INSTALL

**2.3b Secure Passenger Side L-Track to Bracket:** Starting with the **Bottom-Most** mounting hole, secure the L-Track in place using **1/4-20 X 1 Flat Head Hex Drive Screws**.

**NOTE** - There are additional **1/4-20 X 0.75 Flat Head Hex Drive Screws** to use in the highlighted locations shown in **FIG 7b** and **FIG 8b**.



TOOLS REQUIRED FOR THIS STEP: + SCREWDRIVER  
+ IMPACT DRIVER

## STEP | 02 L-TRACK INSTALL

**2.4 Attach End Caps:** We've supplied **End Caps** to use at your discretion. Simply snap it into place in the orientation shown in **FIG 9** and finish by driving a **#8 Screw** into your wall panel (if applicable).

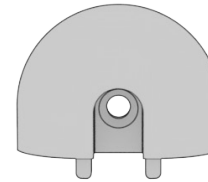


FIG 9

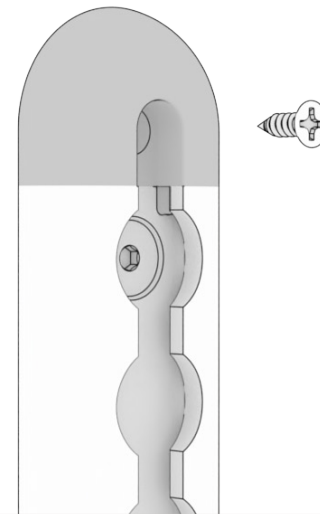
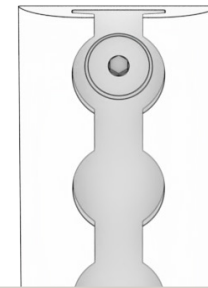


FIG 10

# GET OUT AND EXPLORE!

## + LEAVE US A REVIEW

---

Happy with your new FVC product? We would love to hear (and see) from you! Head to the product page and click "Leave Review." Add a short review and upload a few photos to be showcased on the product page.

## + SHARE YOUR PICS

---

We love seeing how our customers use their FVC products and following along with your adventures. Tag us in your photos with: @flatlinevanco or send them to us via email. We love posting customer pictures in our feed!

## + NEED ANY HELP?

---

If you are having any issues with your product, please reach out, and we will make it right. FVC is a company of van and outdoor enthusiasts that design and use our own products, so we want you to be as stoked on your new parts as we are!



@FLATLINEVANCO