



# INSTALLATION GUIDE

## TRANSIT HEADLINER SHELF TR5021B



### TOOLS REQUIRED (NOT INCLUDED)

- + 7MM SOCKET
- + RATCHET EXTENSION
- + 7/16" WRENCH OR SOCKET
- + 5/32" ALLEN WRENCH

### INSTALL INFO

TIME TO INSTALL THIS PRODUCT: 1 HOUR

Additional help is suggested for a few of the install steps.

### BEFORE YOU START

Please inspect the product and packaging upon delivery to ensure there are no issues and that all parts and hardware are accounted for.


Contact us ASAP if anything is missing at:  
[support@flatlinevanco.com](mailto:support@flatlinevanco.com)

# BEFORE YOU START

All Flatline Van Co products must be properly assembled and secured before attaching to your vehicle. Improper attachment could result in an automobile accident, and could cause serious bodily injury or death to you or to others involved. You are responsible for assembling and securing Flatline Van Co products to your vehicle, checking the mounting points and attachments prior to use, and regularly inspecting the products for wear and or damage. We always recommend you use a professional to install any aftermarket accessories to your vehicle. If you have no mechanical experience and are not thoroughly familiar with the installation procedures, you must have the product installed by a professional installer or other qualified persons. The responsibility is yours and must be taken seriously for everyone's safety.




# PACKAGE CONTENTS

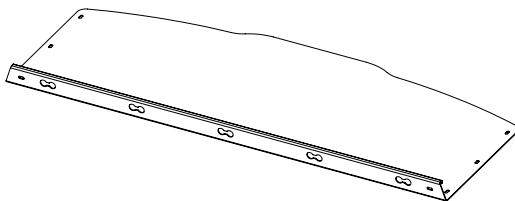


HEADLINER SHELF

QTY: 1

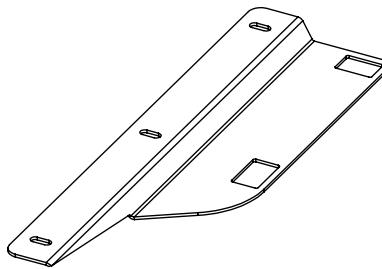

PASSENGER SIDE BRACKET


QTY: 1

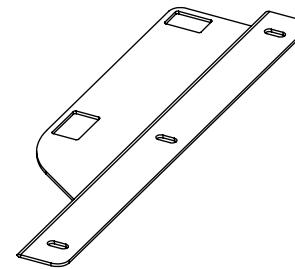

DRIVER SIDE BRACKET


QTY: 1

# HARDWARE

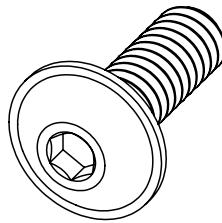


1/4-20 x 0.75 FLANGED BUTTON HEAD  
HEX DRIVE SCREWS

QTY: 6

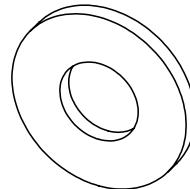


1/4" SCREW FLAT WASHER

QTY: 6

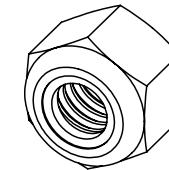

1/4" NYLON LOCKNUT

QTY: 6

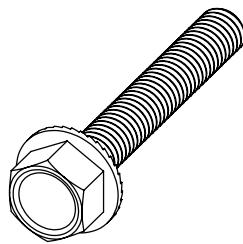


10-32 X 1.25 FLANGED HEX HEAD  
SCREW

QTY: 2



#10 X 0.75 FLANGED HEX HEAD  
SCREW

QTY: 2

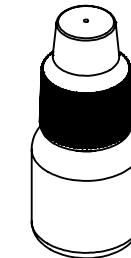

THREADLOCKER

QTY: 1

# INSTALL

## STEP | 01 LAYOUT AND INSTALL PREP

**1.1 Remove Overhead Shelf Bolts:** Use a **7MM Socket** and **Extension** to remove the **Factory Shelf Bolts** (FIG 2) holding the **Overhead Shelf** to the mounting points you'll use to mount your new **Headliner Shelf** (FIG 1).

**NOTE** - *One of these bolts are longer than the other. Be sure to note which one went where before discarding.*

TOOLS REQUIRED FOR THIS STEP:

- + 7MM SOCKET
- + RATCHET EXTENSION



FIG 1



FIG 2

## STEP | 02 INSTALL SHELF BRACKETS

**2.1 Position Brackets Behind Plastic:** Place the **Passenger Shelf Bracket** in the orientation shown behind the **Plastic Handle** of the **Overhead Shelf** (FIG 3) and align the holes of the bracket with that of the trim. Repeat for **Driver Shelf Bracket**.

**2.2 Secure Brackets Behind Plastic:** Secure the **Driver and Passenger Shelf Brackets** using **10-32 X 1.25 Flanged Hex Head Screws** along the *backside* and **#10 X 0.75 Flanged Hex Head Screws** along the *frontside* (FIG 4).

**NOTE - Replace the *longer* factory bolt with the **10-32 X 1.25 Flanged Hex Head Screws** and the *shorter* factory bolts with **#10 X 0.75 Flanged Hex Head Screws**.**

TOOLS REQUIRED FOR THIS STEP: + 7MM SOCKET  
+ RATCHET EXTENSION



FIG 3



FIG 4

## STEP | 03 INSTALL HEADLINER SHELF

**3.1 Position Headliner Shelf:** Place the **Headliner Shelf** on top of the **Shelf Brackets** and position it snug against the front of the cavity above the **Factory Overhead Shelf** (FIG 5).

**3.2 Install Headliner Shelf:** Use **(6) 1/4-20 X 0.75 Flanged Button Head Hex Drive Screws, Flat Washers, And Nylon Locknuts** to loosely install the **Headliner Shelf** to the **Brackets** in the stacking configuration shown in FIG 6. Notice that there is a fair amount of adjustment built in to the shelf and brackets. Position the shelf so that it is as far **forward** as possible and **centered** in the upper cavity of the van.

**3.3 Secure Headliner Shelf and Tighten Fasteners:** Once you are satisfied with the placement of the shelf, go back and tighten all fasteners used on the shelf and brackets.

TOOLS REQUIRED FOR THIS STEP: + 5/32" ALLEN WRENCH  
+ 7/16" WRENCH OR SOCKET



FIG 5

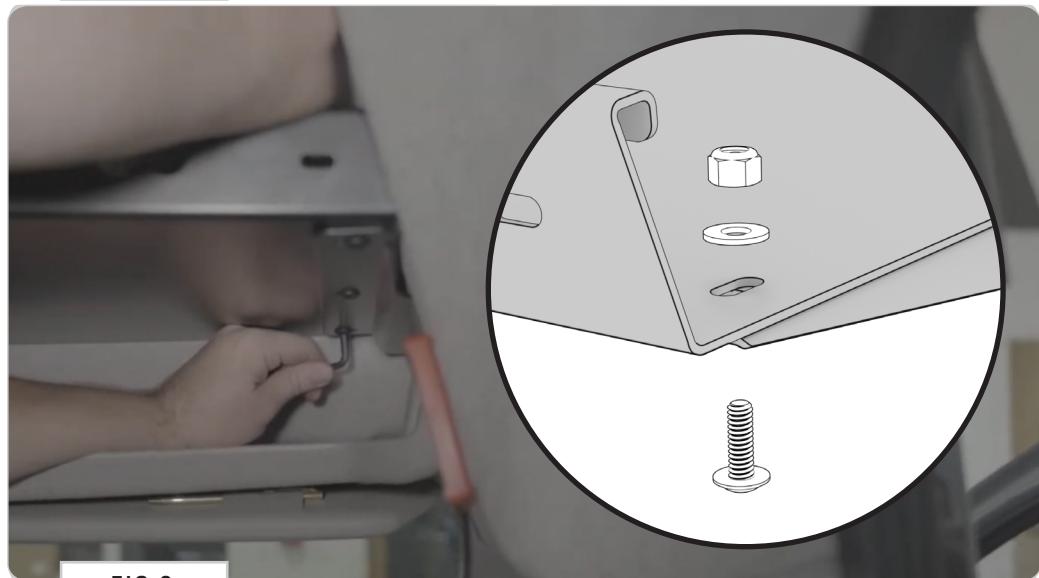


FIG 6

# GET OUT AND EXPLORE!

## + LEAVE US A REVIEW

Happy with your new FVC product? We would love to hear (and see) from you! Head to the product page and click "Leave Review." Add a short review and upload a few photos to be showcased on the product page.

## + SHARE YOUR PICS

We love seeing how our customers use their FVC products and following along with your adventures. Tag us in your photos with: @flatlinevanco or send them to us via email. We love posting customer pictures in our feed!

## + NEED ANY HELP?

If you are having any issues with your product, please reach out, and we will make it right. FVC is a company of van and outdoor enthusiasts that design and use our own products, so we want you to be as stoked on your new parts as we are!



@FLATLINEVANCO