



INSTALLATION GUIDE

UNIVERSAL FIAMMA LEG BRACKET PADS

UN0120B



TOOLS REQUIRED (NOT INCLUDED)

+ T25 TORX

INSTALL INFO

TIME TO INSTALL THIS PRODUCT: 30 MINUTES

Additional help is suggested for a few of the install steps.

BEFORE YOU START

Please inspect the product and packaging upon delivery to ensure there are no issues and that all parts and hardware are accounted for.


Contact us ASAP if anything is missing at:
support@flatlinevanco.com

BEFORE YOU START

All Flatline Van Co products must be properly assembled and secured before attaching to your vehicle. Improper attachment could result in an automobile accident, and could cause serious bodily injury or death to you or to others involved. You are responsible for assembling and securing Flatline Van Co products to your vehicle, checking the mounting points and attachments prior to use, and regularly inspecting the products for wear and or damage. We always recommend you use a professional to install any aftermarket accessories to your vehicle. If you have no mechanical experience and are not thoroughly familiar with the installation procedures, you must have the product installed by a professional installer or other qualified persons. The responsibility is yours and must be taken seriously for everyone's safety.




PACKAGE CONTENTS

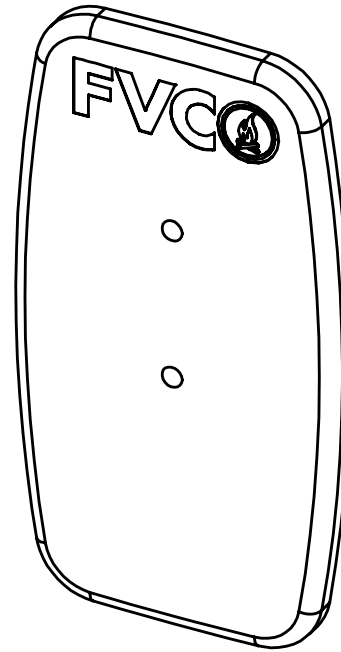

FIAMMA LEG BRACKET PAD

QTY: 2

HARDWARE

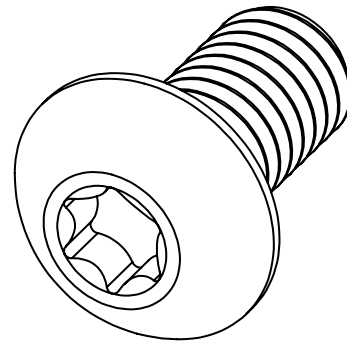

10-32 X 0.375 BUTTON HEAD TORX
DRIVE SCREW

QTY: 4

INSTALL

STEP | 01 LAYOUT AND INSTALL PREP

1.1 Determine Mounting Location: Deploy the awning and be sure to note where the awning legs naturally land when propped up against the van body (**FIG 1-2**). Choose a mounting location that is as flat as possible and will not interfere with any factory or aftermarket components (sliding door, tables, etc.).

TOOLS REQUIRED FOR THIS STEP:



TOOLS REQUIRED FOR THIS STEP:

STEP | 01 LAYOUT AND INSTALL PREP

1.2 Clean and Prep Area : Clean the mounting areas with an automotive-safe cleaning solution (FIG 3).

1.3 Mockup Bracket Pads: Dry fit your Fiamma Leg Bracket Pads to your desired mounting locations (FIG 4) and be sure to double-check that they will be mounted at the same height (FIG 5). Mark your mounting areas with masking tape.



FIG 3



FIG 4



FIG 5

TOOLS REQUIRED FOR THIS STEP: + T25 TORX

STEP | 02 ASSEMBLE MINI MOUNT

2.1 Assemble Fiamma Leg Bracket Pads: Using the provided 10-32 x 0.375 Button Head Torx Screws, attach the **Wall-Mount Leg Brackets** that came with your **Fiamma Awning** to your **FVC Leg Bracket Pads** (FIG 6-7).

NOTE - Slide up the top part of the **Wall-Mount Leg Brackets** to access the upper mounting hole.



FIG 6

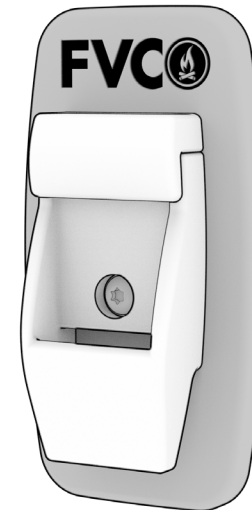


FIG 7

TOOLS REQUIRED FOR THIS STEP:

STEP | 03 INSTALL LEG BRACKET PADS

3.1 Install FVC Leg Bracket Pads: Peel off the backing of your FVC Leg Bracket Pads (FIG 8) and adhere them to your desired mounting locations (FIG 9). Be sure to firmly press them into place for at least 30 seconds and allow the adhesive to cure for 24 hours before use (FIG 10).



FIG 8



FIG 9



FIG 10

GET OUT AND EXPLORE!

+ LEAVE US A REVIEW

Happy with your new FVC product? We would love to hear (and see) from you! Head to the product page and click "Leave Review." Add a short review and upload a few photos to be showcased on the product page.

+ SHARE YOUR PICS

We love seeing how our customers use their FVC products and following along with your adventures. Tag us in your photos with: @flatlinevanco or send them to us via email. We love posting customer pictures in our feed!

+ NEED ANY HELP?

If you are having any issues with your product, please reach out, and we will make it right. FVC is a company of van and outdoor enthusiasts that design and use our own products, so we want you to be as stoked on your new parts as we are!



@FLATLINEVANCO