




INSTALLATION GUIDE

REAR BASKET BIKE TRAY MOUNT

UN1139B

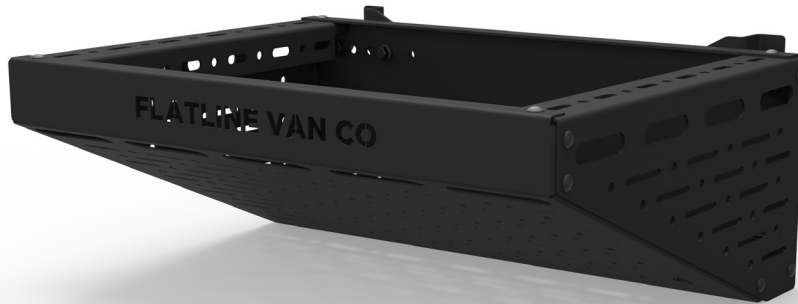

TOOLS REQUIRED (NOT INCLUDED)

- | | |
|------------------|--------------------------|
| + RATCHET | + 9/16" SOCKET |
| + MEASURING TAPE | + 9/16" WRENCH |
| + MARKER | + 7/16" WRENCH OR SOCKET |

INSTALL INFO

TIME TO INSTALL THIS PRODUCT: 1 HOUR

Additional help is suggested for a few of the install steps.
Compatible with all FVC Rear Door Platforms.

BEFORE YOU START

Please inspect the product and packaging upon delivery to ensure there are no issues and that all parts and hardware are accounted for.

Contact us ASAP if anything is missing at:


support@flatlinevanco.com

BEFORE YOU START

All Flatline Van Co products must be properly assembled and secured before attaching to your vehicle. Improper attachment could result in an automobile accident, and could cause serious bodily injury or death to you or to others involved. You are responsible for assembling and securing Flatline Van Co products to your vehicle, checking the mounting points and attachments prior to use, and regularly inspecting the products for wear and or damage. We always recommend you use a professional to install any aftermarket accessories to your vehicle. If you have no mechanical experience and are not thoroughly familiar with the installation procedures, you must have the product installed by a professional installer or other qualified persons. The responsibility is yours and must be taken seriously for everyone's safety.




PACKAGE CONTENTS

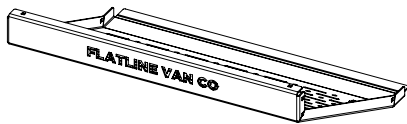


FRONT PANEL

QTY: 1

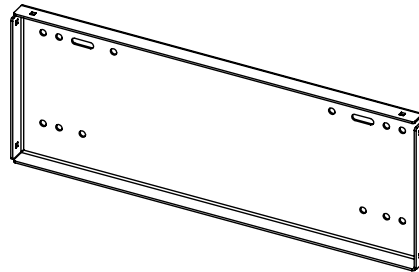


BACK PANEL

QTY: 1

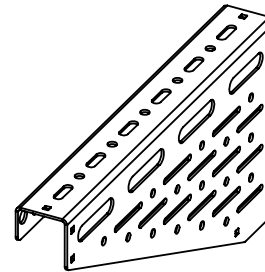


RIGHT SIDE PANEL

QTY: 1

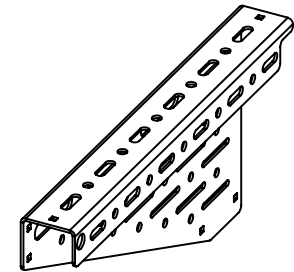


LEFT SIDE PANEL

QTY: 1



LEFT BACK BRACKET


QTY: 1



RIGHT BACK BRACKET


QTY: 1

HARDWARE

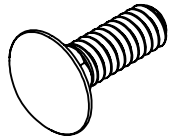


1/4-20 X 0.75 SQUARE NECK
CARRIAGE BOLT

QTY: 14

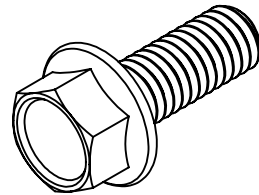


3/8-16 X 1.25 FLANGED
HEX HEAD SCREW

QTY: 4

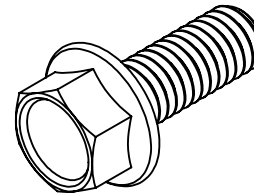


3/8-16 X 1 FLANGED HEX
HEAD SCREW

QTY: 2

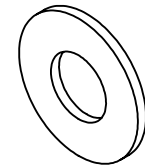


3/8 SCREW FLAT WASHER

QTY: 12

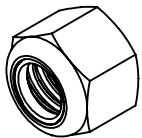

3/8 NYLON INSERT
LOCKNUT

QTY: 6



1/4-20 NYLON INSERT
LOCKNUT

QTY: 14



1/4 SCREW FLAT WASHER

QTY: 14

INSTALL

STEP | 01 LAYOUT AND INSTALL PREP

The **Rear Basket Bike Tray Mount** is designed to be compatible with **FVC Rear Door Platforms**.


1.1 Determine Mounting Height: Dry fit the tray to your platform and determine the desired height of install.

NOTE - The mounting hole spacing will vary depending on what vehicle your **Flatline Van Company Rear Door Platform** is on. See **FIG 2** for a diagram of what holes are used in which case.

PRO-TIP: A table or stand of an appropriate height can be very helpful during this install.

PRO-TIP: Masking tape can also be used to mark desired install height.

TOOLS REQUIRED FOR THIS STEP: + MEASURING TAPE
+ MARKER

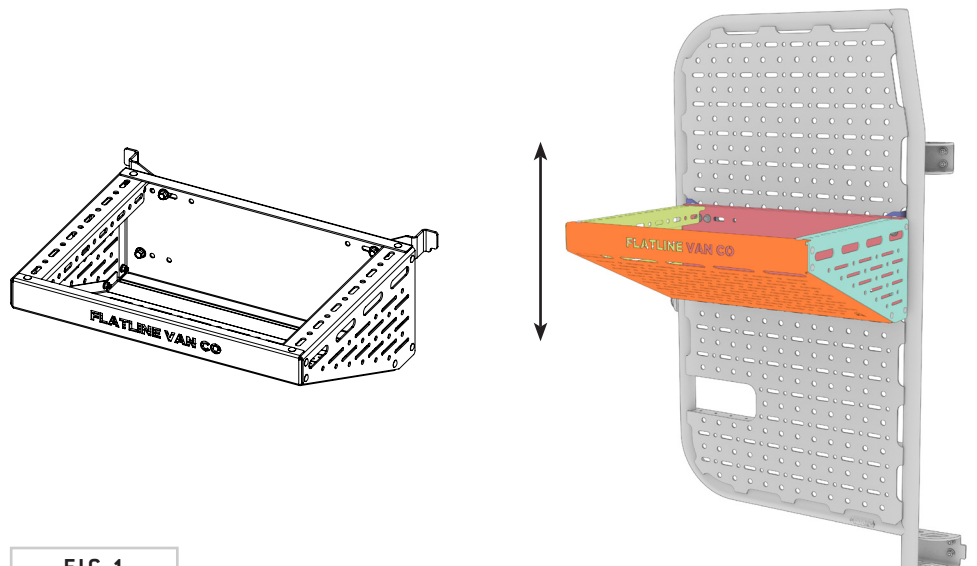


MERCEDES SPRINTER

DODGE PROMASTER

FORD TRANSIT

ALL MAKES & MODELS

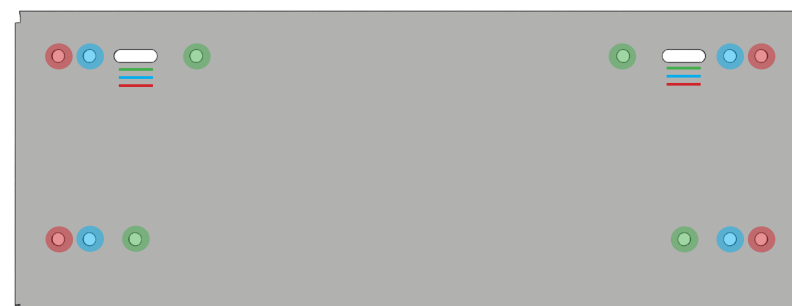

TOOLS REQUIRED FOR THIS STEP: + 7/16" WRENCH OR SOCKET

STEP | 02 BIKE TRAY ASSEMBLY

2.1 Attach Left and Right Side Panels to Rear Panel: Position the **Left and Right Side Panels** to the **Rear Panel** in the orientation as shown in **FIG 3** and **4**. Secure using **1/4-20 x 0.75 Carriage Bolts, Flat Washers and Nylon Locknuts**.

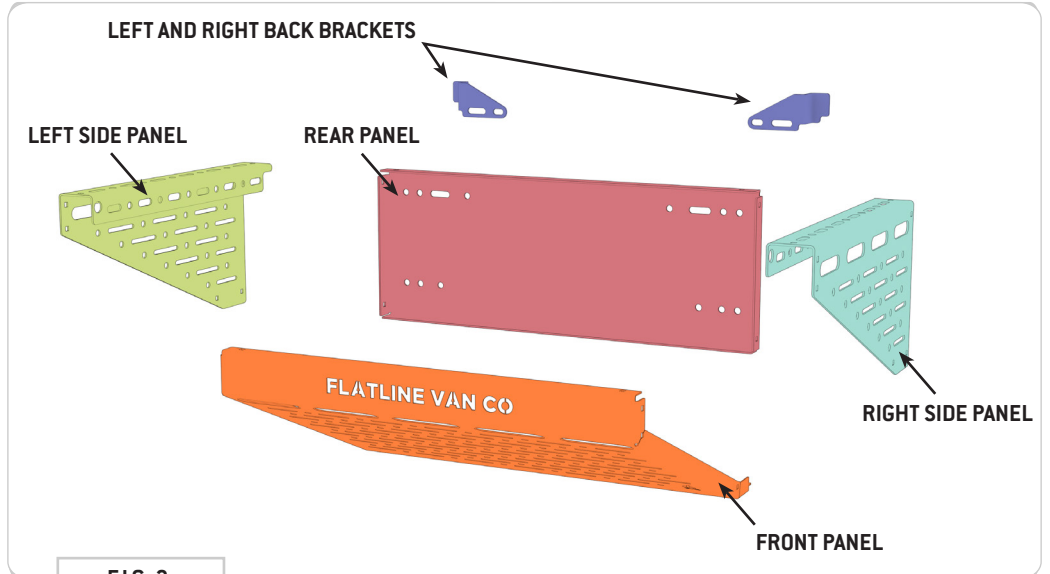


FIG 3

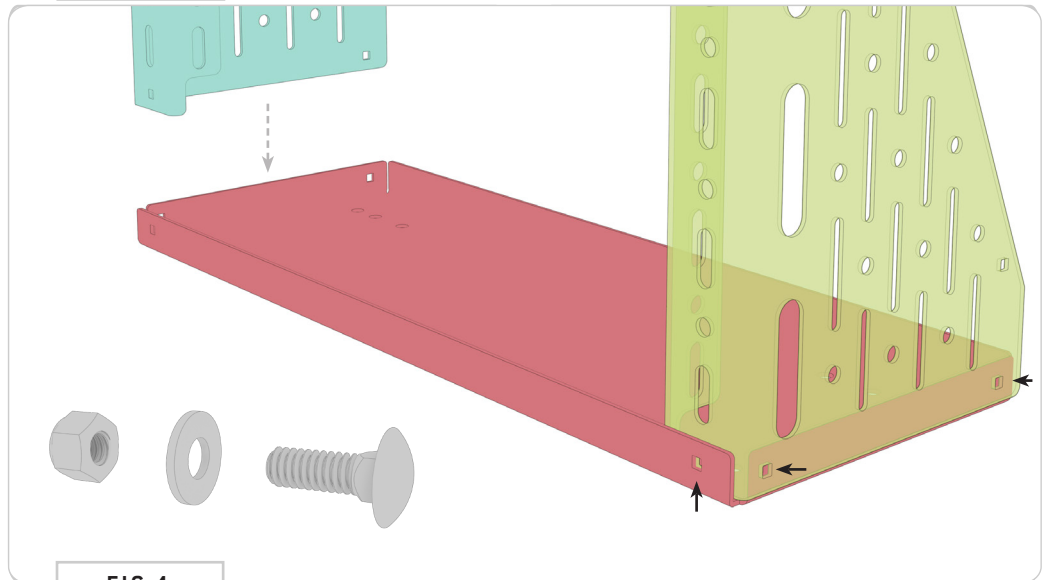




FIG 4

TOOLS REQUIRED FOR THIS STEP: + 7/16" WRENCH OR SOCKET

STEP | 02 BIKE TRAY ASSEMBLY

2.2 Attach Front Panel: Position the **Front Panel** in the orientation as shown in **FIG 5** and **6**. Secure using **1/4-20 x 0.75 Carriage Bolts, Flat Washers and Nylon Locknuts (FIG 5)**.



NOTE - One of the hardware stacks (**FIG 5**) can be accessed through a **Socket** cutout built in to the **Side Panel**. The hardware along the top edge of the **Side Panels** and **Front Panel** can be accessed through a cutout built in to the **Front Panel (FIG 6)**.

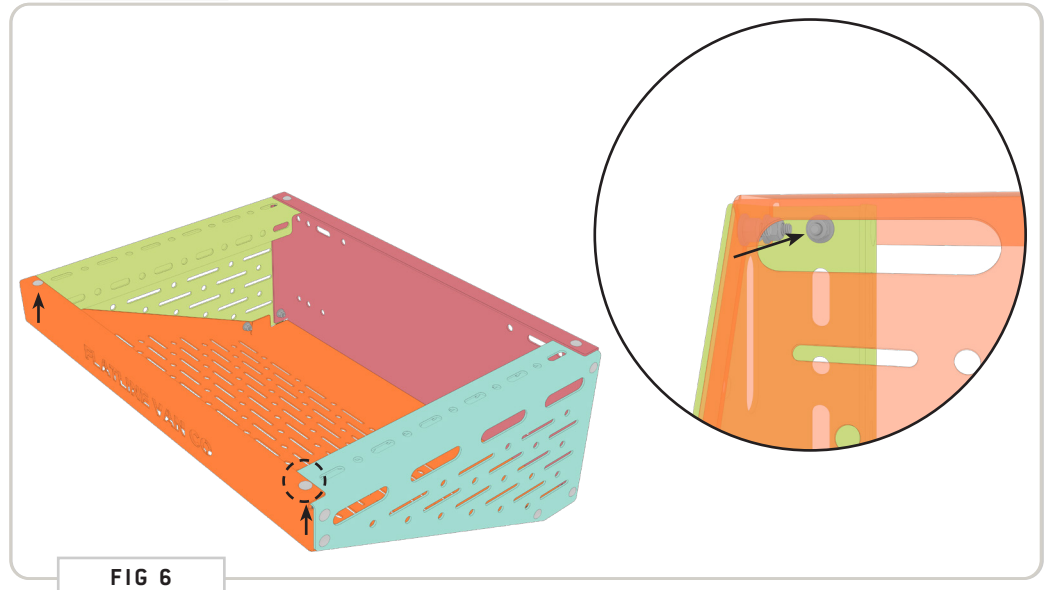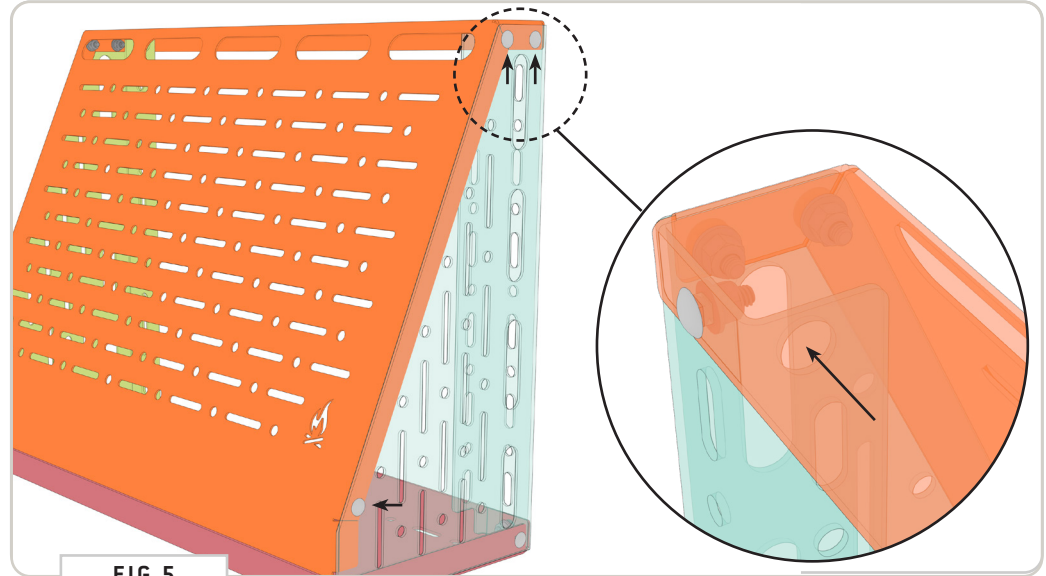

TOOLS REQUIRED FOR THIS STEP: + 9/16" WRENCH OR SOCKET

STEP | 03 BIKE TRAY INSTALLATION

3.1 Install Bike Tray to Platform: Position the **Left and Right Back Brackets** to your **FVC Rear Door Platform** (FIG 7) and tape into place. Fasten **Bike Tray to Platform** through the upper mounting holes with **3/8-16 x 1.25 Flanged Hex Head Screws, Flat Washers and Nylon Locknuts** (FIG 8).

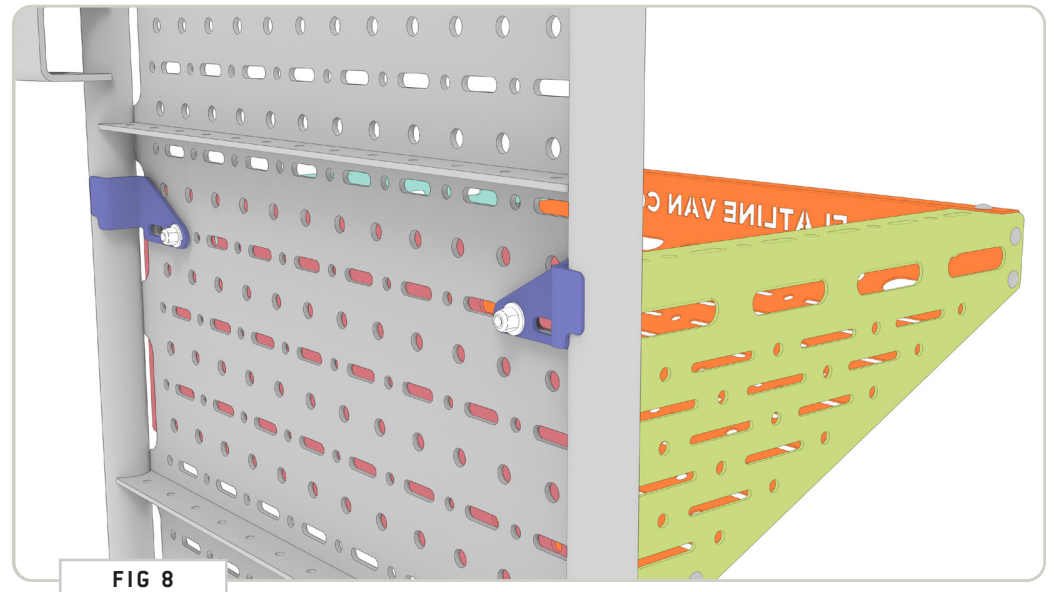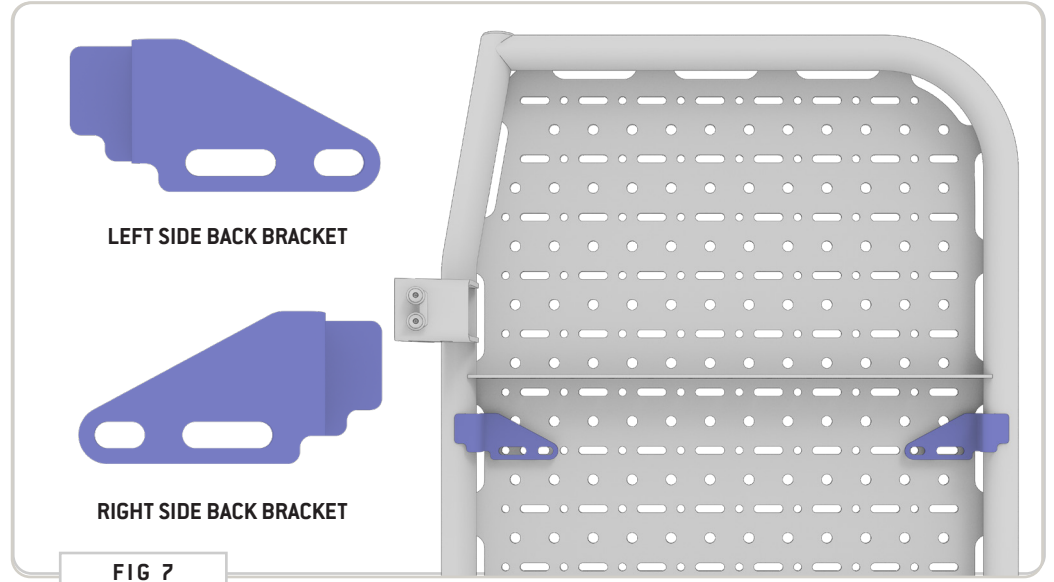

TOOLS REQUIRED FOR THIS STEP: + 9/16" WRENCH OR SOCKET

STEP | 03 BIKE TRAY INSTALLATION

3.2 Secure Bike Tray to Platform: Secure **Bike Tray** through lower mounting holes with **3/8-16 x 1 Flanged Hex Head Screws, Flat Washers and Nylon Locknuts (FIG 9)**.

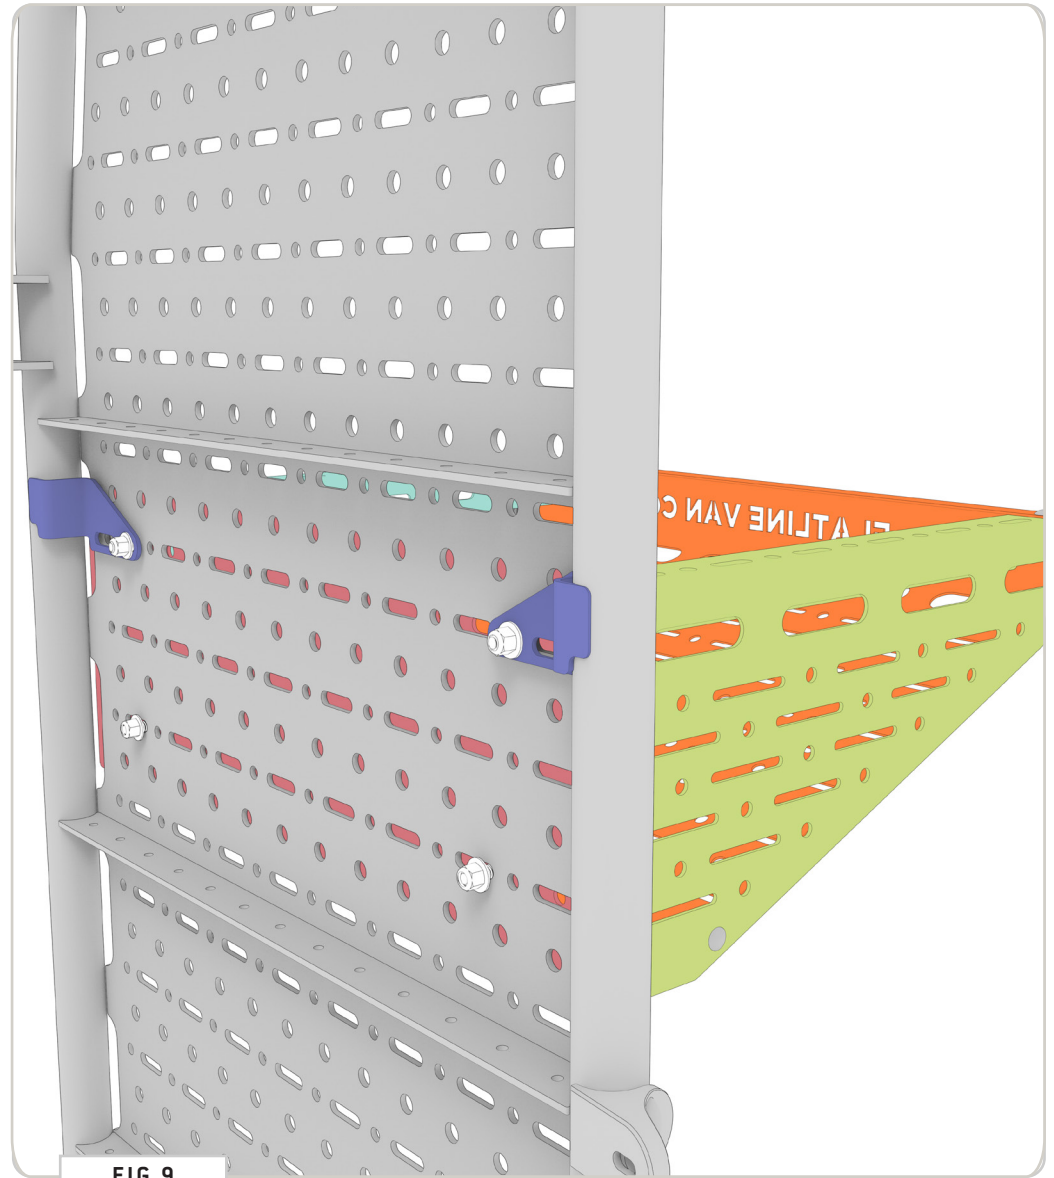


FIG 9

GET OUT AND EXPLORE!

+ LEAVE US A REVIEW

Happy with your new FVC product? We would love to hear (and see) from you! Head to the product page and click "Leave Review." Add a short review and upload a few photos to be showcased on the product page.

+ SHARE YOUR PICS

We love seeing how our customers use their FVC products and following along with your adventures. Tag us in your photos with: @flatlinevanco or send them to us via email. We love posting customer pictures in our feed!

+ NEED ANY HELP?

If you are having any issues with your product, please reach out, and we will make it right. FVC is a company of van and outdoor enthusiasts that design and use our own products, so we want you to be as stoked on your new parts as we are!



@FLATLINEVANCO