



INSTALLATION GUIDE

UNIVERSAL CAMP CHAIR MOUNT

UN1146B



TOOLS REQUIRED (NOT INCLUDED)

- | | |
|--------------------------|------------------|
| + POWER DRILL | + DEBURR TOOL |
| + 5/32" ALLEN WRENCH | + RIVET NUT TOOL |
| + 3/16" DRILL BIT | + CENTER PUNCH |
| + 25/64" DRILL BIT | |
| + 7/16" WRENCH OR SOCKET | |

INSTALL INFO

TIME TO INSTALL THIS PRODUCT: 30-60 MINUTES

Additional help is suggested for a few of the install steps.

BEFORE YOU START

Please inspect the product and packaging upon delivery to ensure there are no issues and that all parts and hardware are accounted for.


Contact us ASAP if anything is missing at:
support@flatlinevanco.com

BEFORE YOU START

All Flatline Van Co products must be properly assembled and secured before attaching to your vehicle. Improper attachment could result in an automobile accident, and could cause serious bodily injury or death to you or to others involved. You are responsible for assembling and securing Flatline Van Co products to your vehicle, checking the mounting points and attachments prior to use, and regularly inspecting the products for wear and or damage. We always recommend you use a professional to install any aftermarket accessories to your vehicle. If you have no mechanical experience and are not thoroughly familiar with the installation procedures, you must have the product installed by a professional installer or other qualified persons. The responsibility is yours and must be taken seriously for everyone's safety.




PACKAGE CONTENTS

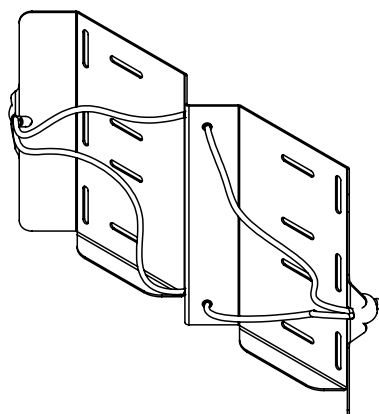

CAMP CHAIR MOUNT


QTY: 1

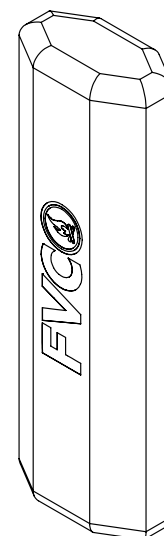

CAMP CHAIR

QTY: 2

HARDWARE

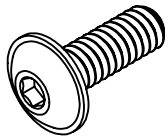


1/4-20 X 0.75 FLANGED BUTTON
HEAD HEX DRIVE SCREW

QTY: 4



1/4" FLAT WASHER

QTY: 8



1/4-20 NYLON INSERT
LOCKNUT

QTY: 4



1/4-20 RIVET NUT

QTY: 4

TOOLS REQUIRED FOR THIS STEP:

STEP | 01 LAYOUT AND INSTALL PREP

1.1 Product Compatibility: Before mounting, review the dimensional graphics featured in **FIG 1** to determine the correct fitment of your **FVC Camp Chair Bracket** to your **Rear Door Molle Panels** or alternative mounting surface.

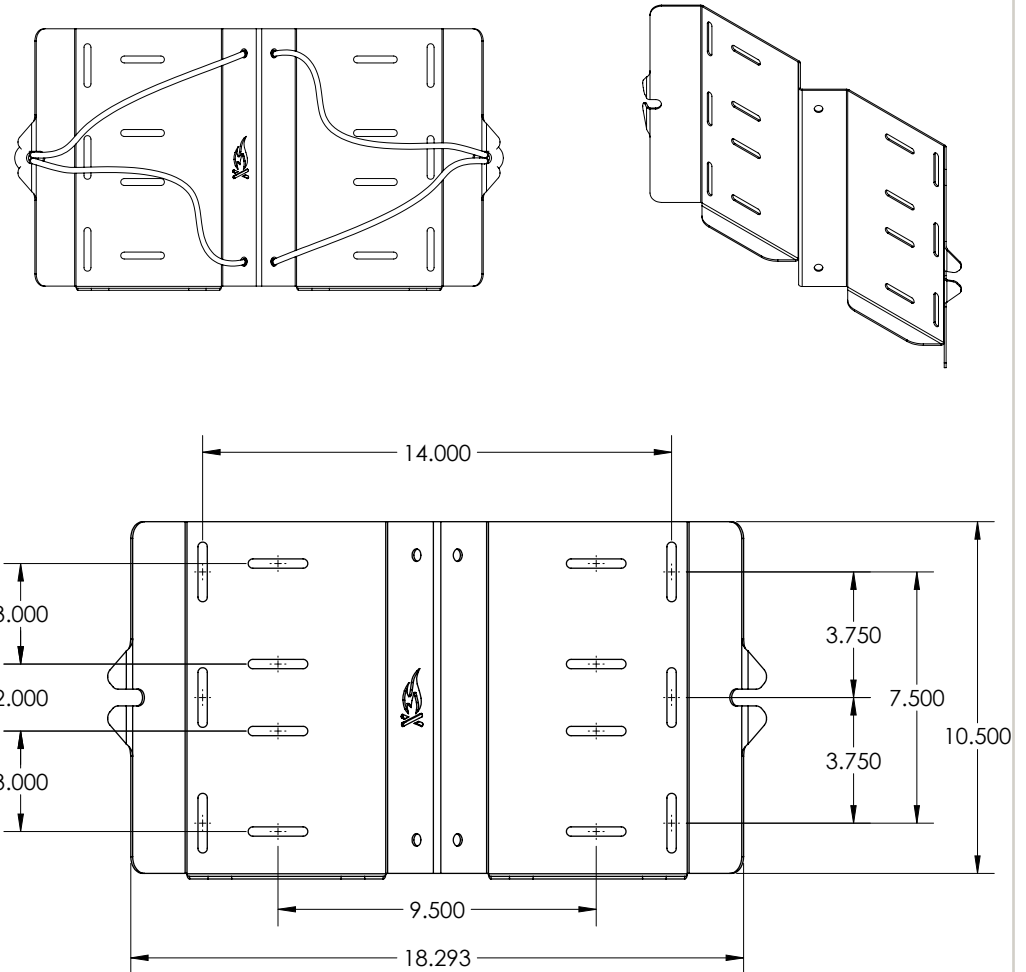




FIG 1

STEP | 02A INSTALL TO MOLLE PANELS

2.1a Position Mounting Bracket: Hold the **FVC Camp Chair Bracket** against your **Sprinter or Transit Rear Door Molle Panel** at your desired height. Align four *vertical* mounting slots on the bracket with the 1/4" slots running *horizontally* on the panel (**FIG 2-3**).

*NOTE - Depending on your layout of accessories or desired mounting location, you can use any combination of horizontal and vertical slots as needed. This is just an example of integrating the **Camp Chair Bracket** to **FVC Rear Door Molle Panels** specifically.*

TOOLS REQUIRED FOR THIS STEP:

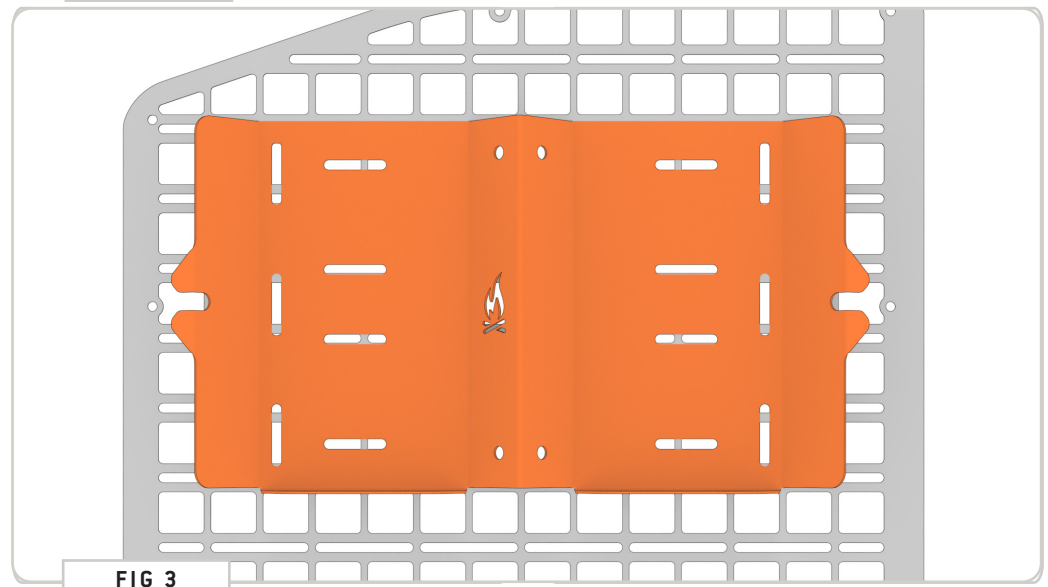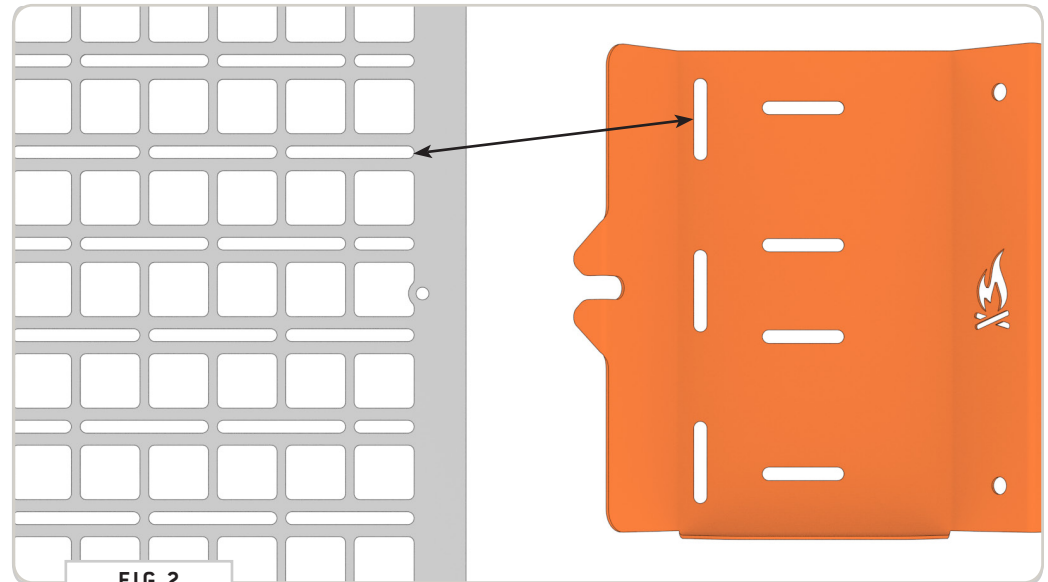

STEP | 02A INSTALL TO MOLLE PANELS

2.2a Fasten Bracket to Panel: Slide a 1/4" Flat Washer onto a 1/4-20 X 0.75" Flanged Button Head Screw. Insert the screw through the front of the bracket slot and through the slot on the **Molle Panel (FIG 4)**. Secure on the back side with another 1/4" Flat Washer and Nylon Locknut (**FIG 5**). Repeat for all 4 mounting points.

TOOLS REQUIRED FOR THIS STEP: + 5/32" ALLEN WRENCH
+ 7/16" WRENCH



FIG 4



FIG 5

STEP | 02B DIRECT MOUNT INSTALL

2.1b Mark and Drill Holes: Hold the bracket level on your mounting surface and mark at least four mounting locations through the slots with a center punch. Drill out pilot holes and step up to a 25/64" drill bit. Deburr the holes and apply rust-preventative coating to raw metal if applicable.

NOTE - As an example, we have the **House Systems Cabinet (UN1013B)** depicted here as the alternative mounting surface.

TOOLS REQUIRED FOR THIS STEP:

- + CENTER PUNCH
- + POWER DRILL
- + 3/16" DRILL BIT (OR SIMILAR)
- + 25/64" DRILL BIT
- + DEBURR TOOL
- + RIVET NUT TOOL

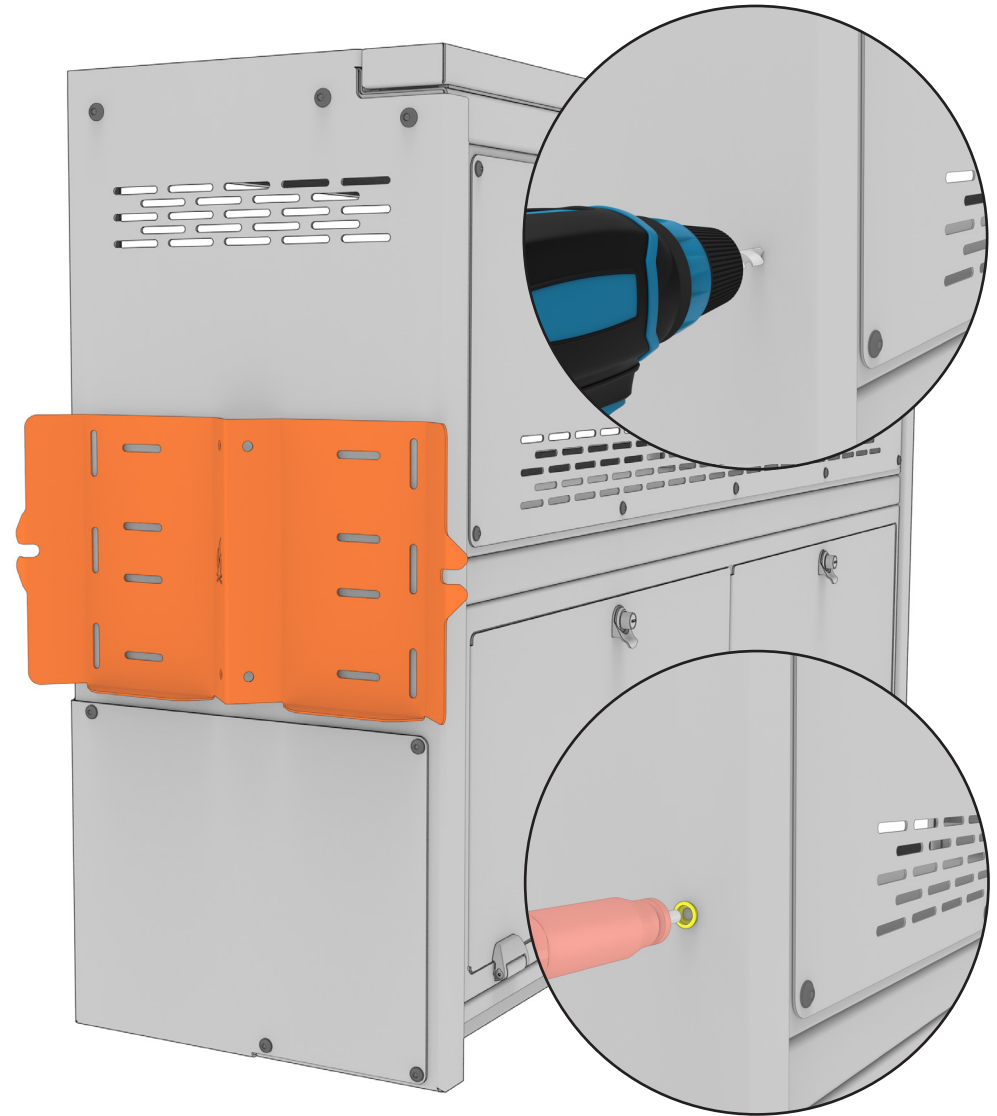


FIG 6

TOOLS REQUIRED FOR THIS STEP: + 5/32" ALLEN WRENCH

STEP | 02B DIRECT MOUNT INSTALL

2.2b Secure Camp Chair Mount: Position the bracket over the installed rivet nuts and secure using **1/4-20 X 0.75" Flanged Button Head Screws** and **Flat Washers**.

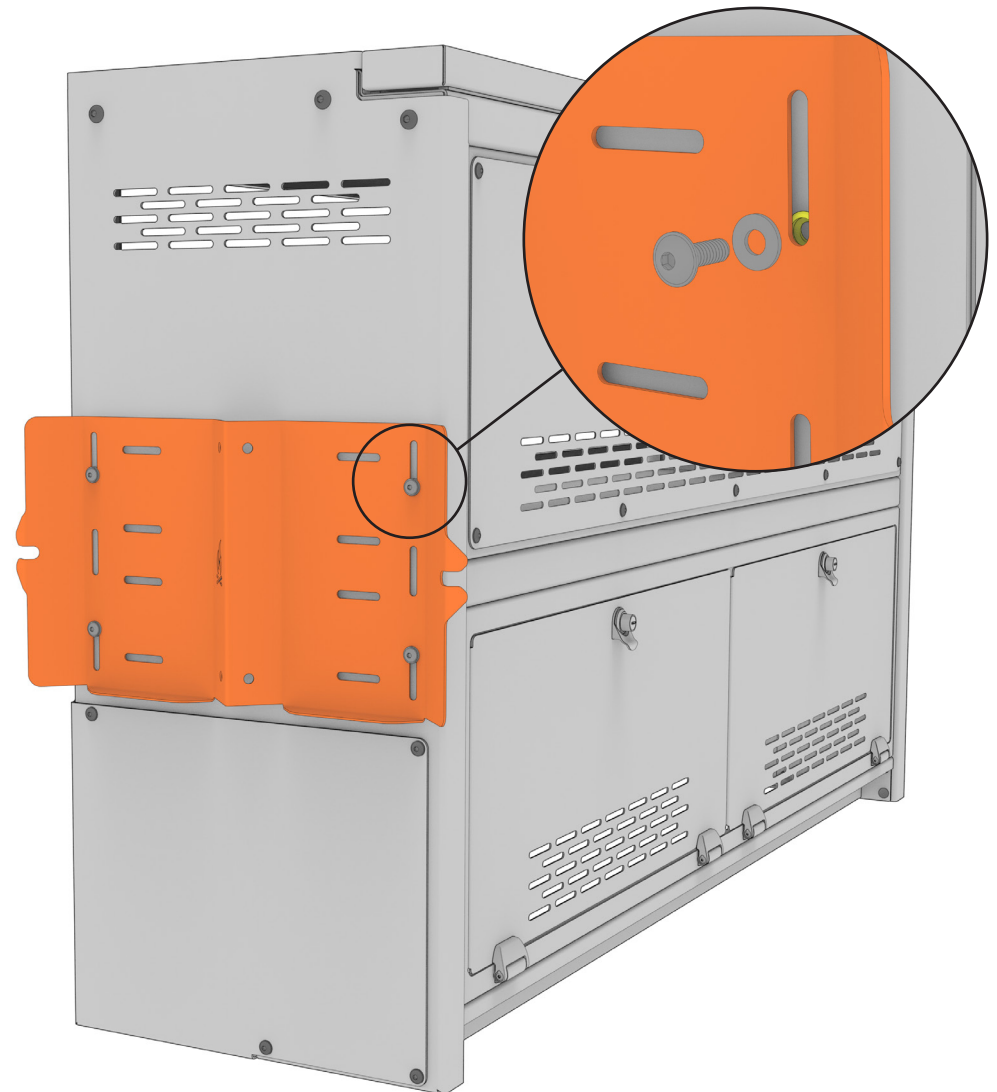


FIG 7

TOOLS REQUIRED FOR THIS STEP: +

STEP | 03 ATTACH CAMP CHAIRS

3.1 Attach Camp Chairs: Load up your bagged camp chair to the mounting bracket and adjust to your desired height. Stretch the elastic bungee cord across the face of the chair and hook the toggle ball around the retention tab to bind the chair securely (FIG 8-9). Repeat for second chair (FIG 10).



FIG 8



FIG 9



FIG 10

GET OUT AND EXPLORE!

+ LEAVE US A REVIEW

Happy with your new FVC product? We would love to hear (and see) from you! Head to the product page and click "Leave Review." Add a short review and upload a few photos to be showcased on the product page.

+ SHARE YOUR PICS

We love seeing how our customers use their FVC products and following along with your adventures. Tag us in your photos with: @flatlinevanco or send them to us via email. We love posting customer pictures in our feed!

+ NEED ANY HELP?

If you are having any issues with your product, please reach out, and we will make it right. FVC is a company of van and outdoor enthusiasts that design and use our own products, so we want you to be as stoked on your new parts as we are!



@FLATLINEVANCO